
ALASKA

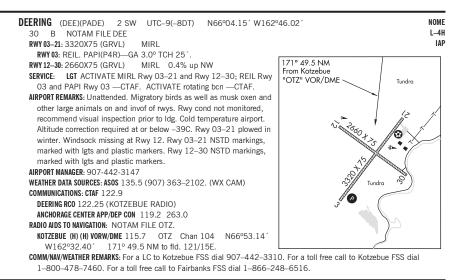

DELTA DAVES (See DELTA JUNCTION on page 92)

DELTA JUNCTION

ALL WEST (AK77) PVT 11 E UTC-9(-8DT) N63°56.49' W145°25.33' 1275 NOTAM FILE Not insp. RWY 09-27: 5500X75 (TURF-GRVL) AIRPORT REMARKS: Unattended. AIRPORT MANAGER: 907-895-9800 COMM/NAV/WEATHER REMARKS: For a toll free call to Fairbanks FSS dial 1-866-248-6516.	ANCHORAGE H-1b, L-1a, 3b, 3e
DELTA DAVES (AA22) PVT 7 NW UTC-9(-8DT) N64°07.69' W145°48.51' 1049 NOTAM FILE Not insp. RWY 06-24: 1800X100 (TURF-DIRT) RWY 06: Trees. AIRPORT REMARKS: Unattended. AIRPORT MANAGER: 907-895-4887 COMM/NAV/WEATHER REMARKS: For a toll free call to Fairbanks FSS dial 1–866–248–6516.	FAIRBANKS
DELTA JUNCTION (D66) 1 N UTC-9(-8DT) N64°03.01' W145°43.35' 1150 NOTAM FILE FAI RWY 07-25: 2500X60 (GRVL) RWY 07: Trees. RWY 25: Trees. Rgt tfc. AIRPORT REMARKS: Unattended. Rwy condition not monitored, recommend visual inspection of Allen Army artid. Rwy 07 p-line W of rwy marked with orange balls. Clnc slope to p of arpt. Arpt and electricity usage fees apply. Ctc arpt mgmt. Rwy 07–25 edges marked	line 33:1. 335' lgtd twr 1 mi S d with reflective cones. Transient
parking on East end, South side of Rwy 07. Personnel and eqpt may be working on the AIRPORT MANAGER: 907-460-6688 COMMUNICATIONS: CTAF 122.9 SUAIS 125.3 126.3 (1-800-758-8723). COMM/NAV/WEATHER REMARKS: For a toll free call to Fairbanks FSS dial 1-866-248-6516.	e rwy at any time.