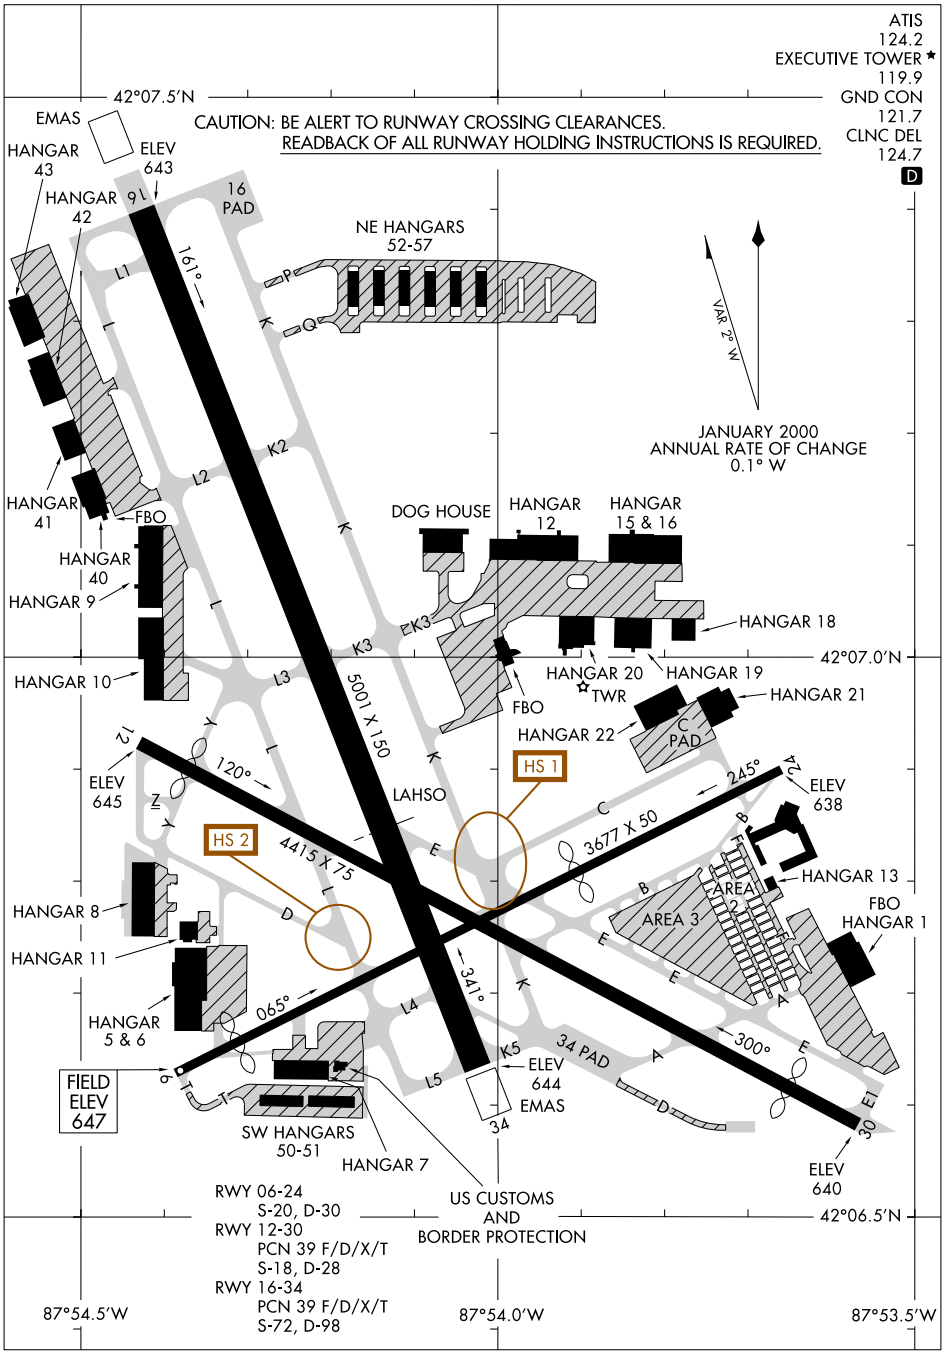
ATIS
124.2
EXECUTIVE TOWER ★
119.9
GND CON
121.7
CLNC DEL
124.7
D
42°07.5'N
EMAS
HANGAR 43
ELEV 643
HANGAR 42
CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.
16 PAD
NE HANGARS 52-57
161°
VAR 2° W
JANUARY 2000
ANNUAL RATE OF CHANGE
0.1° W
HANGAR 41
FBO
HANGAR 40
HANGAR 9
DOG HOUSE
HANGAR 12
HANGAR 15 & 16
HANGAR 18
HANGAR 10
5001 X 150
42°07.0'N
HANGAR 20
HANGAR 19
TWR
HANGAR 21
FBO
HANGAR 22
C PAD
HS 1
ELEV 645
120°
LAHSO
245°
24
ELEV 638
3677 X 50
HS 2
4415 X 75
HANGAR 13
AREA 2
AREA 3
FBO HANGAR 1
HANGAR 8
HANGAR 11
341°
065°
HANGAR 5 & 6
34 PAD
300°
FIELD ELEV 647
ELEV 644
EMAS
SW HANGARS 50-51
HANGAR 7
ELEV 640
RWY 06-24
S-20, D-30
RWY 12-30
PCN 39 F/D/X/T
S-18, D-28
RWY 16-34
PCN 39 F/D/X/T
S-72, D-98
US CUSTOMS AND BORDER PROTECTION
42°06.5'N
87°54.5'W
87°54.0'W
87°53.5'W