

LOC/DME I-ACY	APP CRS	Rwy Idg	10000
109.10	308°	TDZE	64
Chan 28		Apt Elev	75

ILS or LOC/DME RWY 31


ATLANTIC CITY INTL (ACY)

⚠


ASR

MISSED APPROACH: Climb to 500 then climbing right turn to 2000 via heading 130° and via ACY R-090 to SMITS INT/ ACY 11 DME and hold.

ATIS	ATLANTIC CITY APP CON	ATLANTIC CITY TOWER	GND CON	CLNC DEL
125.725 316.15	124.6 327.125	120.3 239.0	121.9 284.6	127.85 353.775

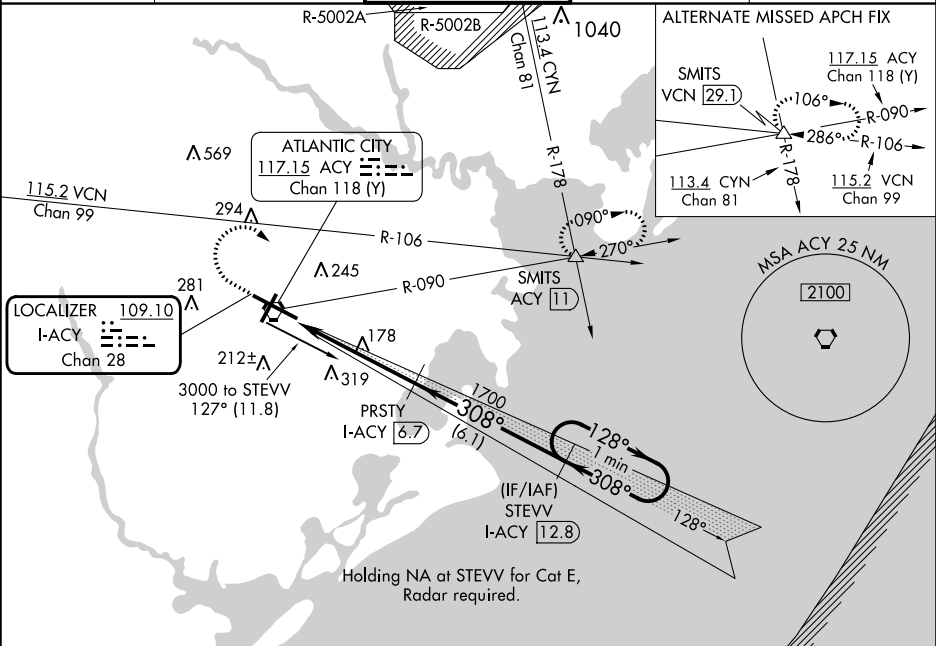

ELEV 75	D	TDZE 64
---------	---	---------

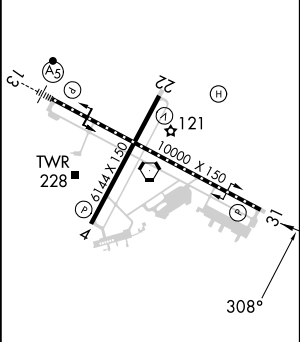

TDZ/CL Rwy 13
HIRL Rwy 4-22 and 13-31
REIL Rwy 31

DME REQUIRED

500	2000	ACY R-090	SMITS	Use I-ACY DME when on localizer course. VGSI and ILS glidepath not coincident (VGSI Angle 3.00/TCH 69).		One Minute Holding Pattern	
↑	hdg 130°			PRSTY I-ACY [6.7]	STEVEV I-ACY [12.8]		
				I-ACY [1.8]	I-ACY [3]		
				1700	1700		
				308°	308°		
				128°	128°		
				2000	2000		
				GS 3.00°	TCH 52		
				1.2	3.7 NM	6.1 NM	
CATEGORY	A	B	C	D	E		
S-ILS 31	264/40 200 (200-¾)						
S-LOC 31	520/50	456 (500-1)	520/60 456 (500-1¼)	520-1½	456 (500-1½)		
CIRCLING	540-1 465 (500-1)	600-1 525 (600-1)	620-1½ 545 (600-1½)	640-2 565 (600-2)	760-2½ 685 (700-2½)		