
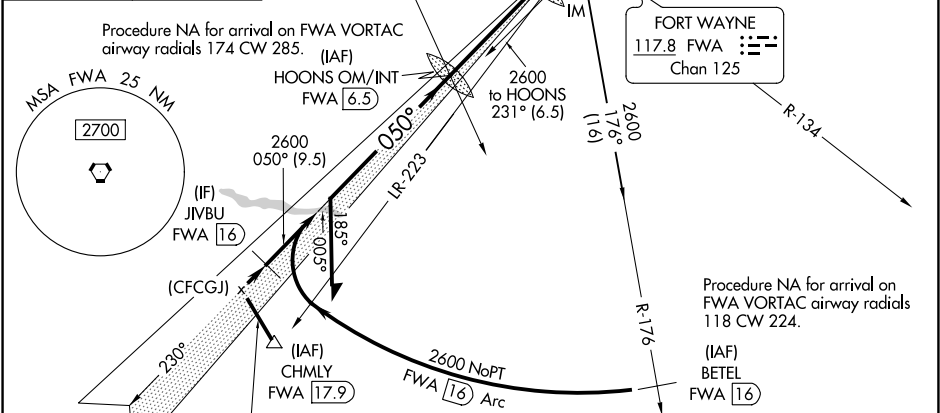


LOC I-HVD 111.9	APP CRS 050°	Rwy Idg 11981 TDZE 815 Apt Elev 815
---------------------------	------------------------	--

ILS RWY 5 (CAT II)
FORT WAYNE INTL (FWA)

ASR	ALSIF-2	MISSED APPROACH: Climb to 3000 then climbing right turn to 3000 on FWA R-134 to OSBER INT/FWA 22 DME and hold.
---	--	---

ATIS 121.25 360.825	FORT WAYNE APP CON 127.2 284.6	FORT WAYNE TOWER 119.1 269.325	GND CON 121.9 348.6	CLNC DEL 124.75
--	---	---	--	--

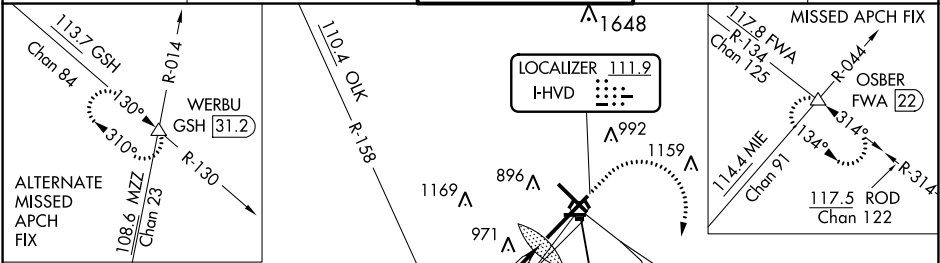

ELEV 815	TDZE 815
Remain within 10 NM HOONS OM/INT FWA 6.5 2600 2494 2600 GS 3.00° TCH 55 IM 5.1 NM 1119'	1300 3000 OSBER FWA R-134
CATEGORY A B C D	S-ILS 5 RA 106/12 100 DA 915
CATEGORY II ILS - SPECIAL AIRCREW & AIRCRAFT CERTIFICATION REQUIRED	