

LOC/DME I-FWA	APP CRS	Rwy Idg	8001
<u>109.9</u>		TDZE	800
Chan 36	321°	Apt Elev	815

ILS or LOC RWY 32
FORT WAYNE INTL (FWA)

DME required for LOC only. DME or RADAR required for procedure entry.

MALSR




For inop ALS, increase S-ILS 32 Cat E visibility to RVR 4000, S-LOC 32 Cat E visibility to RVR 6000. Use I-FWA DME when on the localizer course.
RVR 1800 authorized with use of FD or AP or HUD to DA.




MISSED APPROACH: Climb to 3000 then left turn on FWA VORTAC R-285 to TELEY INT/FWA 17.5 DME and hold.


ATIS 121.25 360.825	FORT WAYNE APP CON 127.2 284.6	FORT WAYNE TOWER 119.1 269.325	GND CON 121.9 348.6	CLNC DEL 124.75
------------------------	-----------------------------------	-----------------------------------	------------------------	--------------------

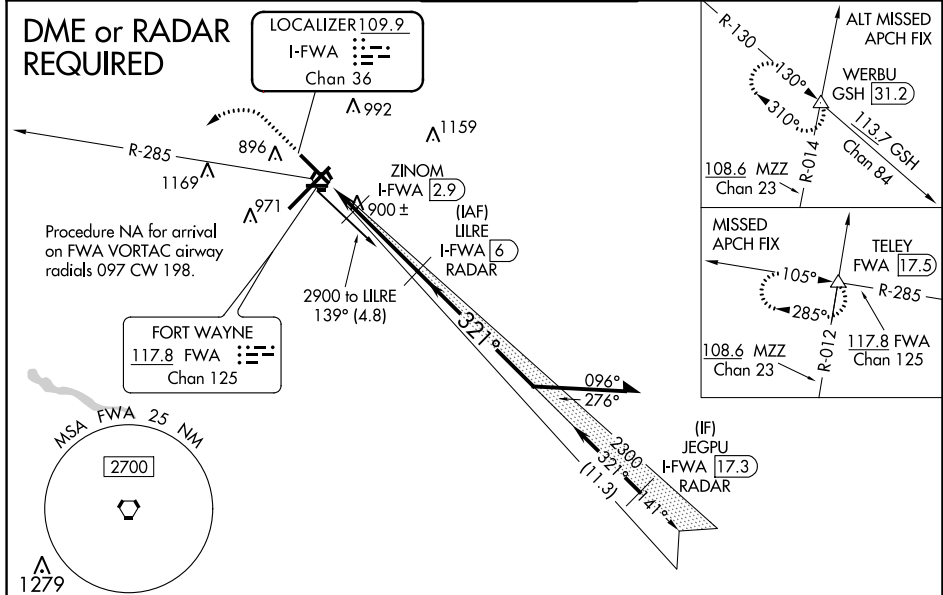DME or RADAR
REQUIRED

ELEV	815	D	TDZE	800
------	-----	----------	------	-----

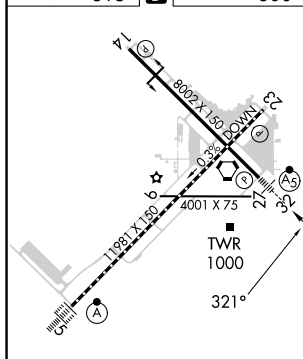

Cat E Procedure Turn NA.

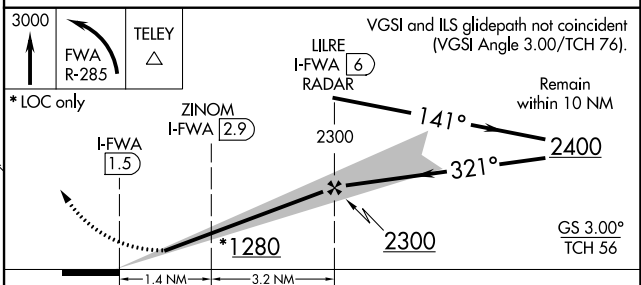

TDZ/CL Rwy 5 REIL Rwys 14 and 23 HIRL Rwys 5-23 and 14-32						S-ILS 32	# 1000/24 200 (200-½)					
FAF to MAP 4.6 NM						S-LOC 32	1160/24 360 (400-½)		1160/40 360 (400-¾)			
Knots	60	90	120	150	180	CIRCLING	1300-1	485 (500-1)	1420-1¾ 605 (700-1¾)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)	
Min:Sec	4:36	3:04	2:18	1:50	1:32							

FORT WAYNE, INDIANA

Amdt 31A 13SEP18

40°59'N-85°12'W

FORT WAYNE INTL (FWA)
ILS or LOC RWY 32