
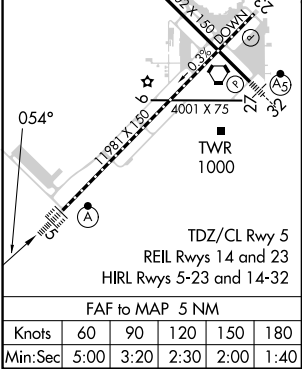


VORTAC FWA	APP CRS	Rwy Idg	11981
117.8	054°	TDZE	815
Chan 125		Apt Elev	815

VOR or TACAN RWY 5
FORT WAYNE INTL (FWA)

DME or RADAR required.		ALSF-2	MISSED APPROACH: Climbing right turn to 3000 on FWA VORTAC R-134 to OSBER INT/FWA 22 DME and hold.	
For inop ALS, increase S-5 Cat C/D/E visibility to 1½ SM.				

ATIS	FORT WAYNE APP CON	FORT WAYNE TOWER	GND CON	CLNC DEL
121.25 360.825	127.2 284.6	119.1 269.325	121.9 348.6	124.75

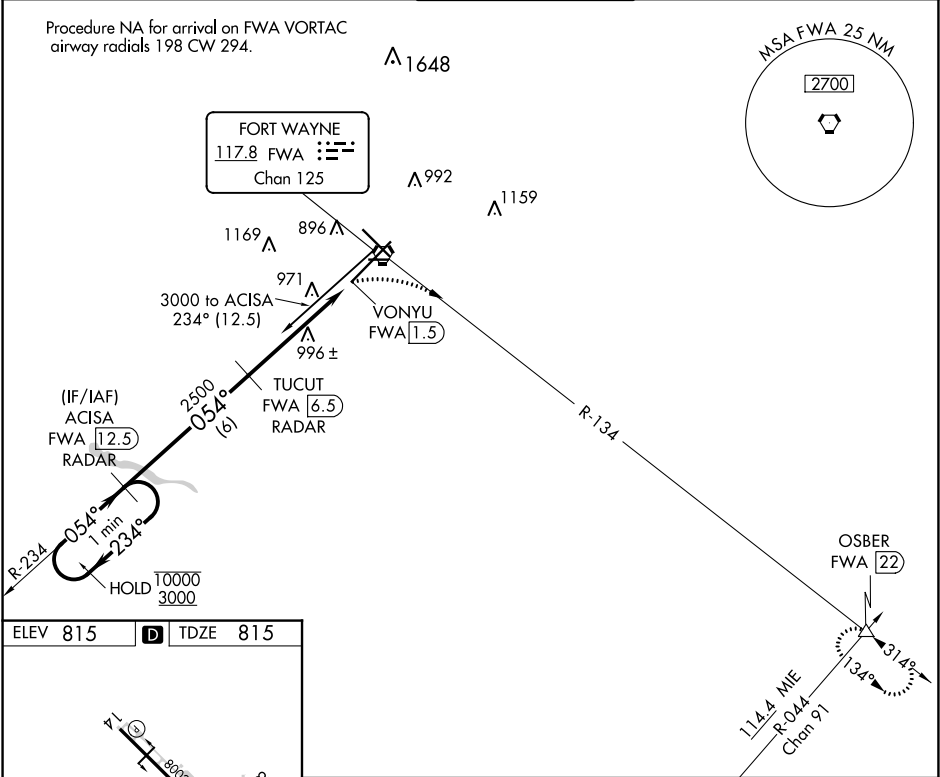

One Minute Holding Pattern		ACISA FWA 12.5 RADAR	TUCUT FWA 6.5 RADAR	3000 FWA R-134	OSBER
10000 3000		234° 054°	054°	FWA 2.9	VONYU FWA 1.5
		6 NM	3.6 NM	1.4	
		3.07° TCH 55			
CATEGORY	A	B	C	D	E
S-5	1320/24	505 (600-½)	1320/55	505 (600-1)	1320/60 505 (600-1½)
CIRCLING	1320-1	505 (600-1)	1360-1½ 545 (600-1½)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)