

VORTAC IRW 114.1 Chan 88	APP CRS 300°	Rwy Idg TDZE Apt Elev N/A N/A 1354
--	------------------------	--

VOR-B

CLARENCE E PAGE MUNI (R/C'E)


▼

▲

When local altimeter setting not received, use Wiley Post altimeter setting and increase all MDA 40 feet.

MISSED APPROACH: Climbing left turn to 3000 direct IRW VORTAC and hold.

AWOS-3 125.05	OKE CITY APP CON 124.6 266.8	UNICOM 123.0 (CTAF) 0
-------------------------	--	---------------------------------

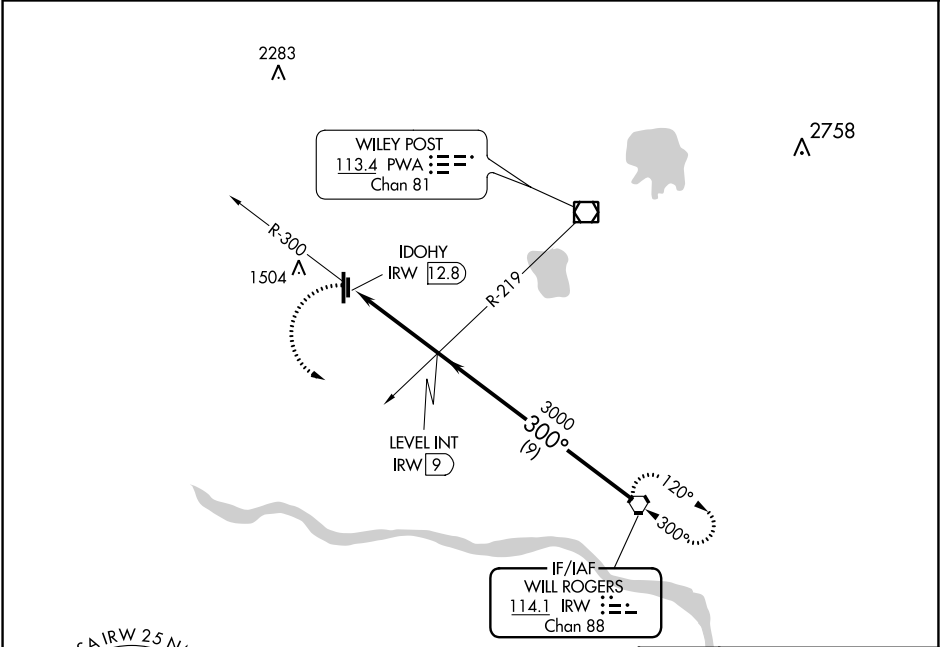

3000

IRW

IRW VORTAC

3800

Procedure Turn NA

IRW 12.8

LEVEL INT IRW 9

3000

300°

3.8 NM

9 NM

CATEGORY	A	B	C	D	FAF to MAP 3.8 NM					
CIRCLING	1860-1	506 (600-1)	1860-1½ 506 (600-1½)	NA	Knots	60	90	120	150	180
					Min:Sec	3:48	2:32	1:54	1:31	1:16

ELEV 1354

17L

17R

3502 X 75

35R

35L

6014 X 100

300°

MIRL Rwy 17L-35R 0
HIRL Rwy 17R-35L 0