

LOC FVNY <u>111.3</u>	APP CRS 164°	Rwy Idg 6569 TDZE 793 Apt Elev 802
---------------------------------	------------------------	---


ILS Y RWY 16R
VAN NUYS (VNY)

T For inop MALSR, increase S-ILS all Cats visibility to 2 SM. When
A local altimeter setting not received, use Burbank altimeter setting
and increase DA to 1480 feet and all Cats visibility to 1½ SM.



MISSED APPROACH: Climb to 1700 then climbing right turn to 4600 on heading 210° and on SMO VOR/DME R-267 and on VTU VOR/DME R-087 to VTU VOR/DME and hold.

ATIS 127.55	SOCAL APP CON 120.4 360.6 (NORTH) 134.2 338.2 (WEST)	VAN NUYS TOWER ★ 119.3 (CTAF) 0 239.0	GND CON 121.7	CLNC DEL 126.6 239.0	CPDLC	UNICOM 122.95
----------------	--	--	------------------	-------------------------	-------	------------------

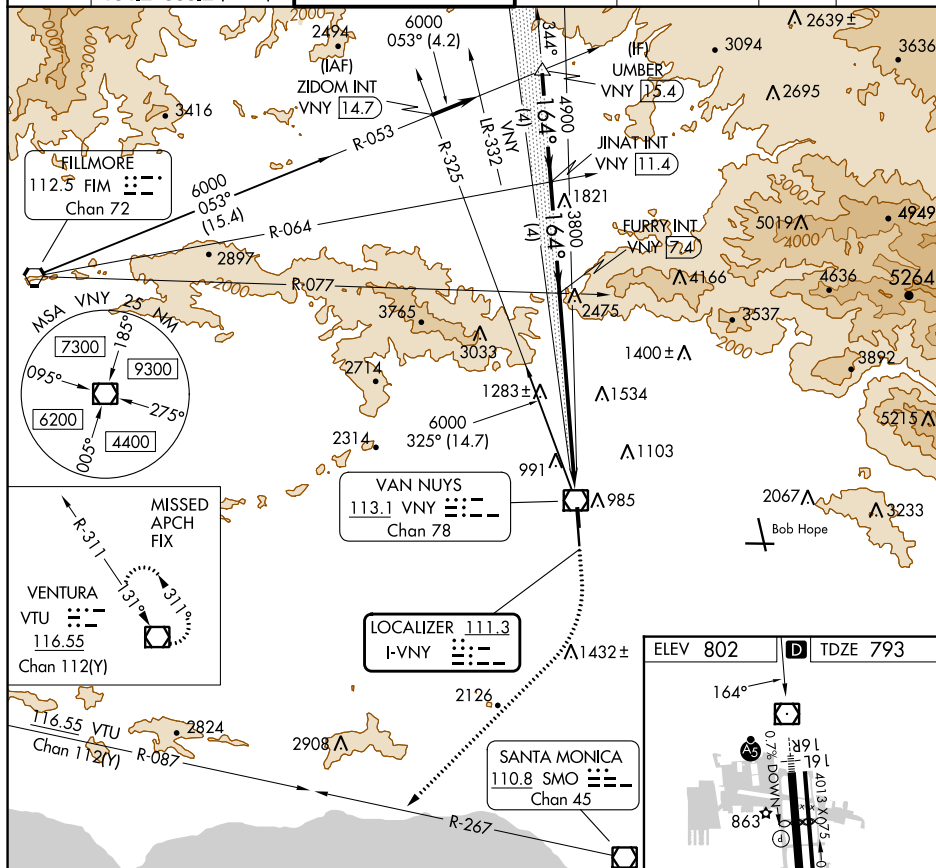

UMBER VNY 15.4 6000 GS 3.50° TCH 49		JINAT INT VNY 11.4 4900		FURRY INT VNY 7.4 3800		1700 4600 hdg R-267 210°		SMO R-267 VTU R-087		VTU 	
4 NM		4 NM		8 NM							
CATEGORY		A		B		C		D			
S-ILS 16R				1461-1½		668 (700-1½)					

