
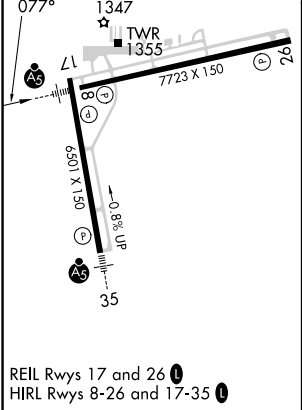


LOC/DME I-CWA	APP CRS	Rwy Idg	7723
110.3	077°	TDZE	1274
Chan 40		Apt Elev	1277

ILS or LOC RWY 8

CENTRAL WISCONSIN (CWA)

DME required. RNP APCH - GPS.		MALSR	MISSED APPROACH: Climb to 3000 direct ASARE and hold.	
For inop ALS, increase S-LOC 8 Cat C and D visibility to 1 SM.				
ATIS	MINNEAPOLIS CENTER	CWA TOWER ★	GND CON	UNICOM
127.45	124.4 317.7	119.75 (CTAF) 360.7	121.9 360.7	122.95

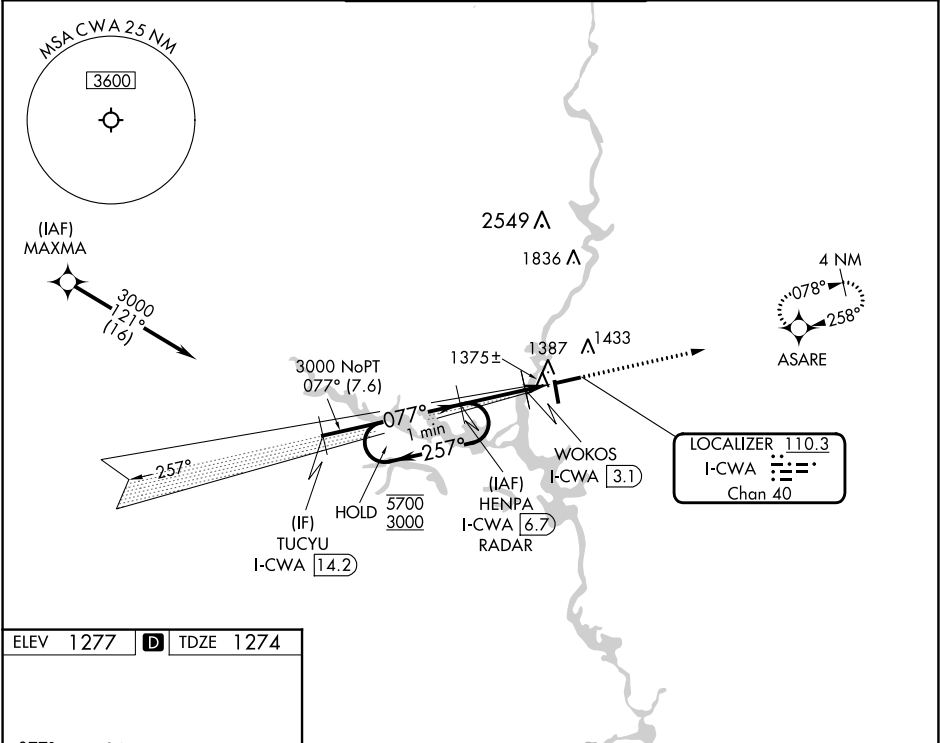

One Minute Holding Pattern		HENPA I-CWA 6.7 RADAR	3000	ASARE
5700 3000		WOKOS I-CWA 3.1	I-CWA 2.4	I-CWA 1.4
GS 3.00° TCH 55		1860		
		3.6 NM	0.7 NM	1 NM
CATEGORY	A	B	C	D
S-ILS 8	1474-½ 200 (200-½)			
S-LOC 8	1640-½	366 (400-½)	1640-⅝	366 (400-⅝)
CIRCLING	1740-1	463 (500-1)	1740-1½	1840-2
			463 (500-1½)	563 (600-2)