

LOC/DME I-OWA	APP CRS	Rwy Idg	5500
109.55	302°	TDZE	1145
Chan 32(Y)		Apt Elev	1145

ILS or LOC RWY 30

OWATONNA DEGNER RGNL (OWA)

▼

▲ NA


When local altimeter setting not received, use Faribault altimeter setting and increase all DA 41 feet and all MDA 60 feet.
Increase S-LOC 30 Cats C/D visibility to 1½ mile and Circling Cat C visibility to 1½ and Cat D Circling visibility to 2½.

MALS R

AS

MISSED APPROACH Climb to 2000 then climbing right turn to 3000 direct FOW VOR/DME and hold.

AWOS-3	ROCHESTER APP CON ★	UNICOM
128.325	119.8 251.125	122.7 (CTAF) 0

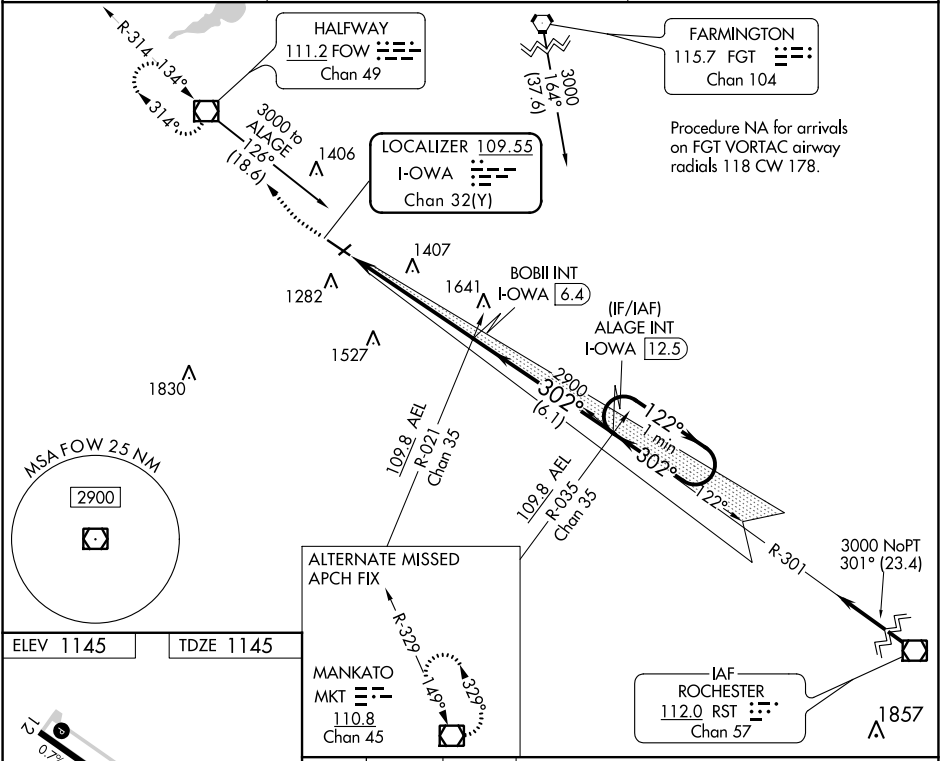

2000 3000 FOW

*LOC only

*I-OWA 2.8

BOBII INT I-OWA 6.4

ALAGE INT I-OWA 12.5

One Minute Holding Pattern

122° 302° 3000

GS 3.00° TCH 50

1.7 NM 3.7 NM 6.1 NM

CATEGORY	A	B	C	D
S-ILS 30	1345-½ 200 (200-½)			
S-LOC 30	1740-½ 595 (600-½)		1740-¼ 595 (600-¼)	
CIRCLING	1740-1 595 (600-1)		1740-¾ 1880-2¼ 595 (600-¾) 735 (800-2¼)	

MIRL Rwy 5-23 0
REIL Rwys 5, 12, and 23 0
HIRL Rwy 12-30 0

FAF to MAP 5.4 NM

Knots	60	90	120	150	180
Min:Sec	5:24	3:36	2:42	2:10	1:48