


WAAS CH 70710 W09A	APP CRS 092°	Rwy Idg TDZE Apt Elev	6502 147 147
--	------------------------	-----------------------------	---

RNAV (GPS) RWY 9

FLORENCE RGNL (FLO)

RNP APCH - GPS.		MALSR	MISSED APPROACH: Climb to 2000 direct ESVAC and hold.		
⚠ For uncompensated Baro-VNAV systems, LNAV/VNAV NA below -7°C or above 54°C. Circling Rwy 1, 19 NA at night.		⚠			
ATIS 123.625	FLORENCE APP CON★ 118.6 341.7 (256°-074°) 135.25 316.15 (075°-255°)	FLORENCE TOWER★ 125.1 (CTAF) 0 353.85	GND CON 121.9 353.85	CLNC DEL 121.9 353.85	UNICOM 122.95

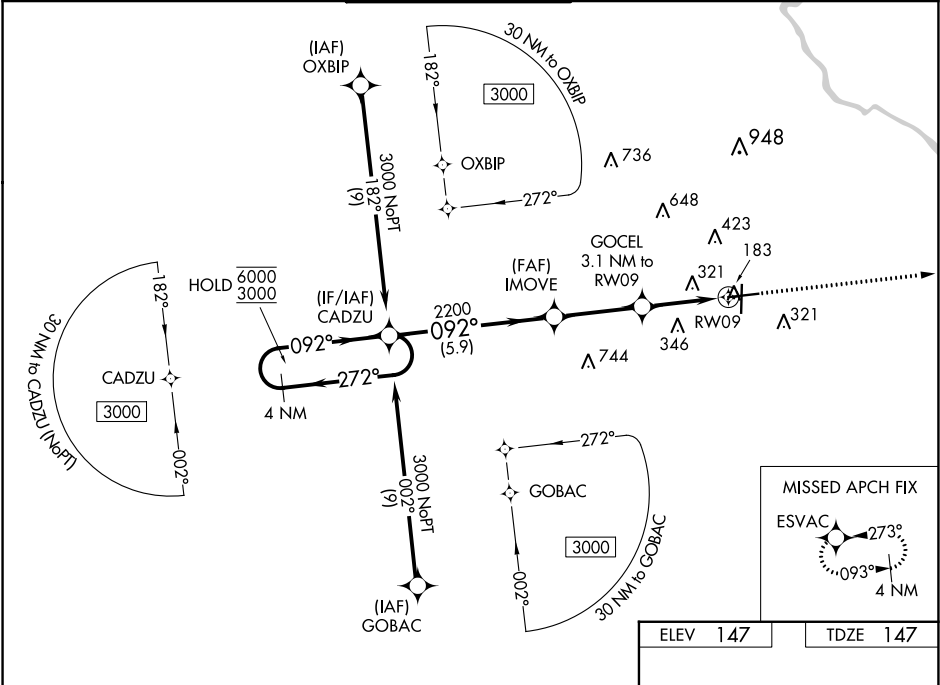

4 NM Holding Pattern

CADZU

2000

ESVAC

↑

✦

6000

3000

← 272°

→ 092°

IMOVE

2200

GOCEL

3.1 NM to RWY09

1.2 NM to RWY09

RWY09

GP 3.00°

TCH 59

2200

1180

5.9 NM

3.2 NM

1.9 NM

1.2 NM

CATEGORY	A	B	C	D
LPV DA		347-½	200 (200-½)	
LNAV/VNAV DA		603-¾	456 (500-¾)	
LNAV MDA	580-½	433 (500-½)	580-¾	433 (500-¾)
CIRCLING	640-1 493 (500-1)	660-1 513 (600-1)	900-2¼ 753 (800-2¼)	900-2½ 753 (800-2½)

TWR

253

245

61

AS

0

092°

0.4% UP

0.5% UP

6502 X 150

6000 X 150


1

27

REIL Rwy 1,19 and 27

HIRL Rwy 9-27

MIRL Rwy 1-19

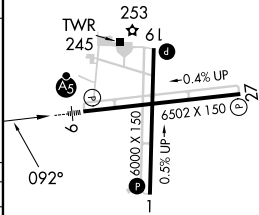

REIL Rwy 1, 19 and 27
HIRL Rwy 9-27
MIRL Rwy 1-19