

DALLAS, TEXAS


TOP ALTITUDE:
5000

LOCALIZER 111.1
I-DPX
Chap 48

COWBOY
116.2 CVE $\overline{\cdot\cdot}=\cdot$
Chan 109

MAVERICK
113.1 TTT 
Chan 78
N122°52'15" W078°02'15"

NOTE: This DP is to be used only upon assignment by Love tower normally between 2100-0600 local time.

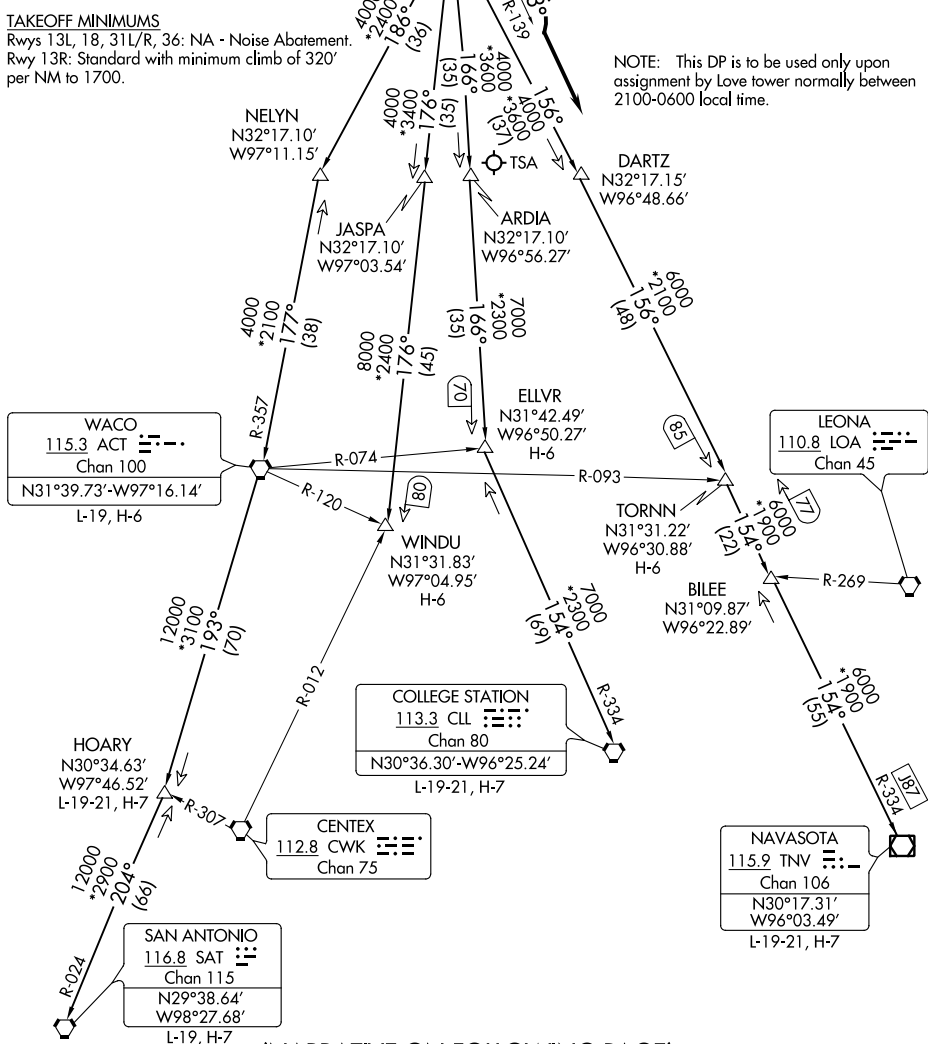

(NARRATIVE ON FOLLOWING PAGE)
(NOTES CONTINUED ON FOLLOWING PAGE)

NOTE: Chart not to scale.

(VENUS4.TTT) 23FEB23

	DEPARTURE ROUTE DESCRIPTION
	TAKEOFF RUNWAY 13R: Turn right heading 163° not later than 0.7 DME outbound on the I-DPX localizer southeast course, to intercept and climb on the CVE R-139 for RADAR vectors to appropriate route. Unless otherwise advised maintain 5000 and expect filed altitude 10 minutes after departure. <u>COLLEGE STATION TRANSITION (VENUS4.CLL)</u>: From over TTT VOR/DME on TTT R-166 to ELLVR, then on CLL R-334 to CLL VORTAC. <u>ELLVR TRANSITION (VENUS4.ELLVR)</u>: From over TTT VOR/DME on TTT R-166 to ELLVR. <u>HOARY TRANSITION (VENUS4.HOARY)</u>: From over TTT VOR/DME on TTT R-186 to NELYN, then on ACT R-357 to ACT VORTAC, then on ACT R-193 to HOARY. <u>NAVASOTA TRANSITION (VENUS4.TNV)</u>: From over TTT VOR/DME on TTT R-156 to TORNN, then on TTT R-156 and TNV R-334 to TNV VOR/DME. <u>SAN ANTONIO TRANSITION (VENUS4.SAT)</u>: From over TTT VOR/DME on TTT R-186 to NELYN, then on ACT R-357 to ACT VORTAC, then on ACT R-193 to HOARY, then on SAT R-024 to SAT VORTAC. <u>TORNN TRANSITION (VENUS4.TORNN)</u>: From over TTT VOR/DME on TTT R-156 to TORNN. <u>WACO TRANSITION (VENUS4.ACT)</u>: From over TTT VOR/DME on TTT R-186 to NELYN, then on ACT R-357 to ACT VORTAC. <u>WINDU TRANSITION (VENUS4.WINDU)</u>: From over TTT VOR/DME on TTT R-176 to WINDU. NOTE: COLLEGE STATION TRANSITION: For piston and turboprop aircraft inbound to William P Hobby, Ellington, Scholes Intl at Galveston, or Texas Gulf Coast Rgnl airports. All other aircraft types inbound to all other Houston terminal area airports except George Bush Intcntl/Houston, Conroe/North Houston Rgnl, David Wayne Hooks Meml, Liberty Muni, or Cleveland Muni Airports. NOTE: ELLVR TRANSITION: For turbojet aircraft inbound to William P Hobby, Ellington, Scholes Intl at Galveston, or Texas Gulf Coast Rgnl Airports. NOTE: HOARY TRANSITION: For E/F suffixed aircraft. NOTE: SAN ANTONIO TRANSITION: For aircraft overflying Centex and San Antonio. NOTE: TORNN TRANSITION: Only for aircraft inbound to George Bush Intcntl/Houston, Conroe/North Houston Rgnl, David Wayne Hooks Meml, Liberty Muni, or Cleveland Muni Airports. NOTE: WACO TRANSITION: For aircraft inbound to Waco or Gray terminal area airports. NOTE: WINDU TRANSITION: For aircraft inbound to Austin or San Antonio terminal area.