

LOC/DME I-ABR
109.9
Chan **36**

APP CRS
308°

Rwy Idg
TDZE
Apt Elev
6901
1301
1302


ILS or LOC RWY 31
ABERDEEN RGNL (ABR)

ADF required.
For inop ALS, increase S-LOC 31 Cats C/D
visibility to 1 SM.

MALSR
AS

MISSED APPROACH: Climb to 3000 then right turn direct
RENEY LOM/I-ABR 6.1 DME and hold.

ASOS 125.875	MINNEAPOLIS CENTER 120.6 371.9	UNICOM 122.7 (CTAF) 0
------------------------	--	---------------------------------

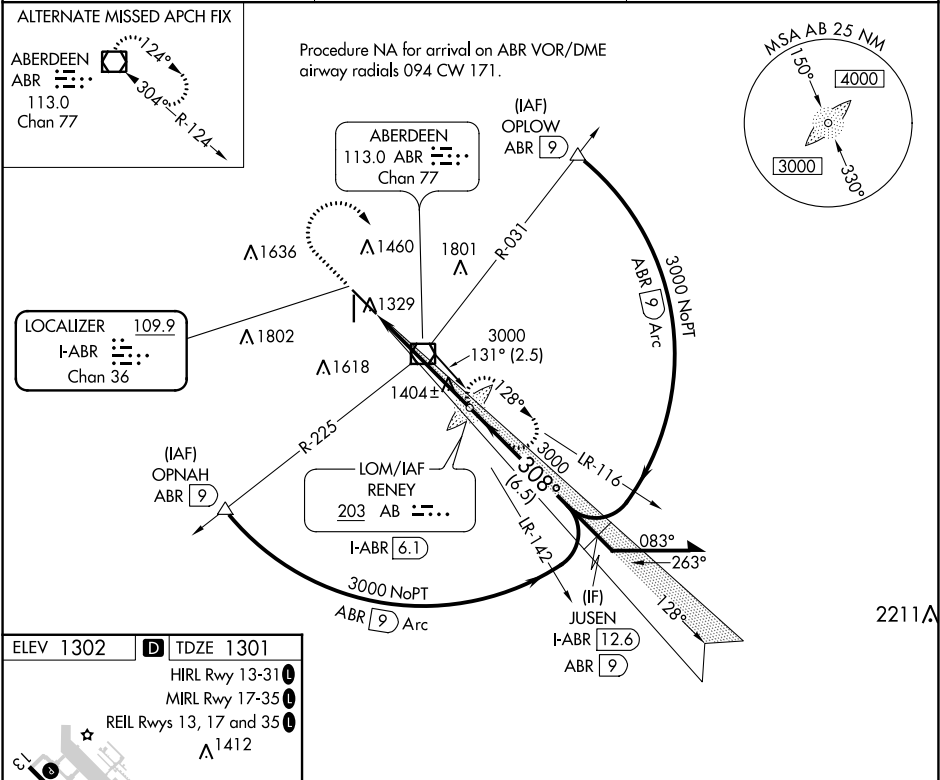

ELEV 1302 TDZE 1301
HIRL Rwy 13-31 0
MIRL Rwy 17-35 0
REIL Rwy 13, 17 and 35 0
1412
ZL
6901 X 100
5000
35
308° 4.8 NM from FAF
AFS

3000
AB
* LOC only.
AB RENEY LOM I-ABR 6.1
Use I-ABR DME when on LOC course.
Remain within 10 NM
128°
308°
3000
GS 3.00°
TCH 64
2908
I-ABR 1.4
* I-ABR 2.3
0.9 NM
3.9 NM

CATEGORY	A	B	C	D
S-ILS 31	1501-½ 200 (200-½)			
S-LOC 31	1660-½ 359 (400-½)		1660-⅝ 359 (400-⅝)	1660-¾ 359 (400-¾)