


WAAS CH 70710 W09A	APP CRS 092°	Rwy Idg TDZE Apt Elev	6502 147 147
--	------------------------	-----------------------------	---

RNAV (GPS) RWY 9

FLORENCE RGNL (FLO)

RNP APCH - GPS.		MALSR	MISSED APPROACH: Climb to 2000 direct ESVAC and hold.		
⚠ For uncompensated Baro-VNAV systems, LNAV/VNAV NA below -7°C or above 54°C. Circling Rwy 1, 19 NA at night.		⚠	ATIS 123.625	FLORENCE APP CON★ 118.6 341.7 (256°-074°) 135.25 316.15 (075°-255°)	FLORENCE TOWER★ 125.1 (CTAF) 0 353.85
			GND CON 121.9 353.85	CLNC DEL 121.9 353.85	UNICOM 122.95

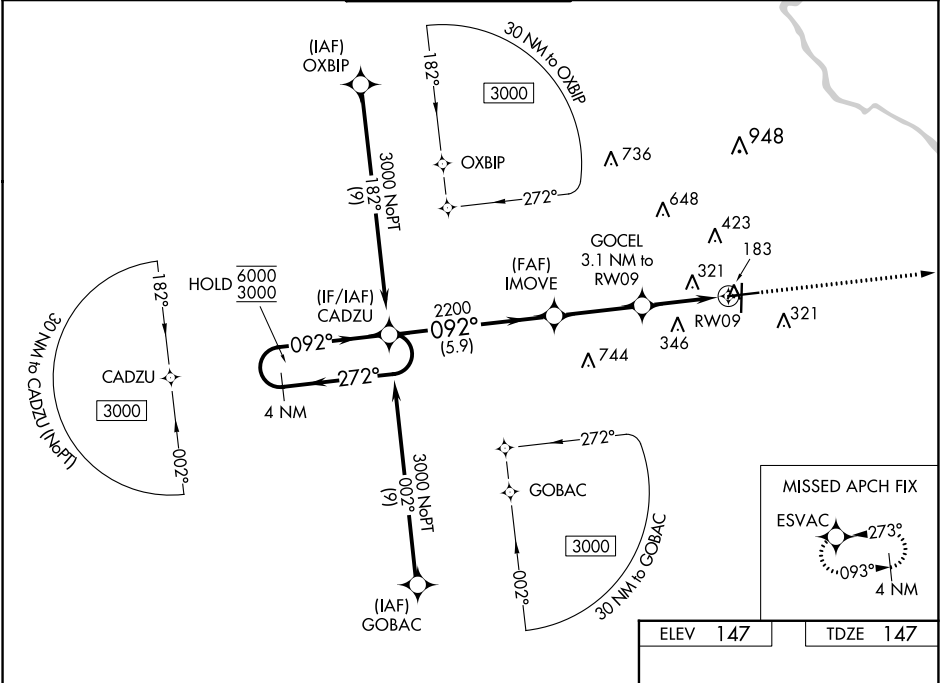

4 NM Holding Pattern

CADZU

2000

ESVAC

6000 ← 272°

3000 → 092°

GP 3.00° TCH 59

IMOVE

2200

GOCEL 3.1 NM to RW09

1.2 NM to RW09

RW09

2200

1180

5.9 NM

3.2 NM

1.9 NM

1.2 NM

CATEGORY	A	B	C	D
LPV DA		347-½	200 (200-½)	
LNAV/VNAV DA		603-¾	456 (500-¾)	
LNAV MDA	580-½	433 (500-½)	580-¾	433 (500-¾)
CIRCLING	640-1 493 (500-1)	660-1 513 (600-1)	900-2¼ 753 (800-2¼)	900-2½ 753 (800-2½)

253 TWR 245 61 150 6502 X 150 0.4% UP 0.5% UP 092° 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REIL Rwys 1, 19 and 27

HIRL Rwy 9-27

MIRL Rwy 1-19