


VOR/DME ELX 116.6 Chan 113	APP CRS 266°	Rwy Idg TDZE Apt Elev 6006 649 649
--	------------------------	--

VOR RWY 28
SOUTHWEST MICHIGAN RGNL (BEH)

DME required.			MALSR	MISSED APPROACH: Climbing right turn to 2500 direct ELX VOR/DME and hold.
▼ ▲ Circling Rwy 14, 32 NA at night. For inop ALS, increase S-28 Cats A and B visibility to 1 SM. ZEVMA fix minimums: for inop ALS, increase S-28 Cats A and B visibility to 1 SM and Cats C and D visibility to 1½ SM.				
ASOS 121.55	SOUTH BEND APP CON ★ 118.55 257.8	SOUTH BEND CLNC DEL 119.7	UNICOM 123.0 (CTAF) 0	

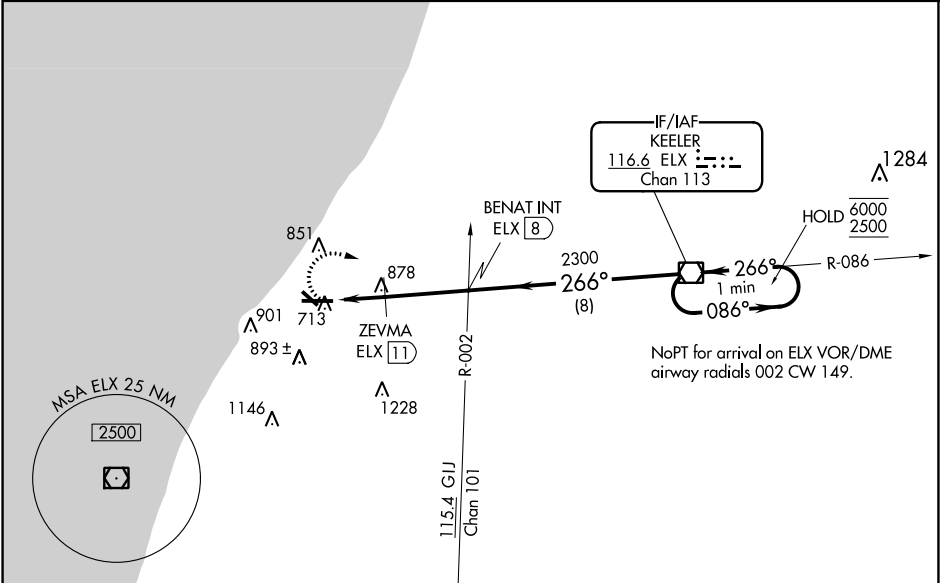

ELEV 649	TDZE 649	2500	ELX				
				One Minute Holding Pattern			
				ELX VOR/DME			
				086° → 6000 ← 266° 2500			
				1.4 NM 0.5 NM 3 NM 8 NM			
				CATEGORY			
				S-28			
				CIRCLING			
				ZEVMA FIX MINIMUMS			
				S-28			
				CIRCLING			