


LOC I-PAU 109.9	APP CRS 360°	Rwy ldg TDZE Apt Elev 6500 47 66
---------------------------	------------------------	--

ILS or LOC RWY 36

ST PAUL ISLAND(SNP)(PASN)

ADF and DME required for procedure entry. DME required.	MALSF	MISSED APPROACH: Climb to 2700 on I-PAU north course (360°) to EVANN/SPY 5.2 DME and hold, continue climb-in-hold to 2700.
▼ ⚠ Circling NA west of Rwy 18-36. Inop table does not apply to S-ILS. When local altimeter setting not received, procedure NA. DME from SPY NDB/DME. Simultaneous reception of I-PAU and SPY DME required.	⚠ ⚠	

ASOS 135.75	ANCHORAGE CENTER 119.1 339.8	CTAF 122.3 0
-----------------------	--	------------------------

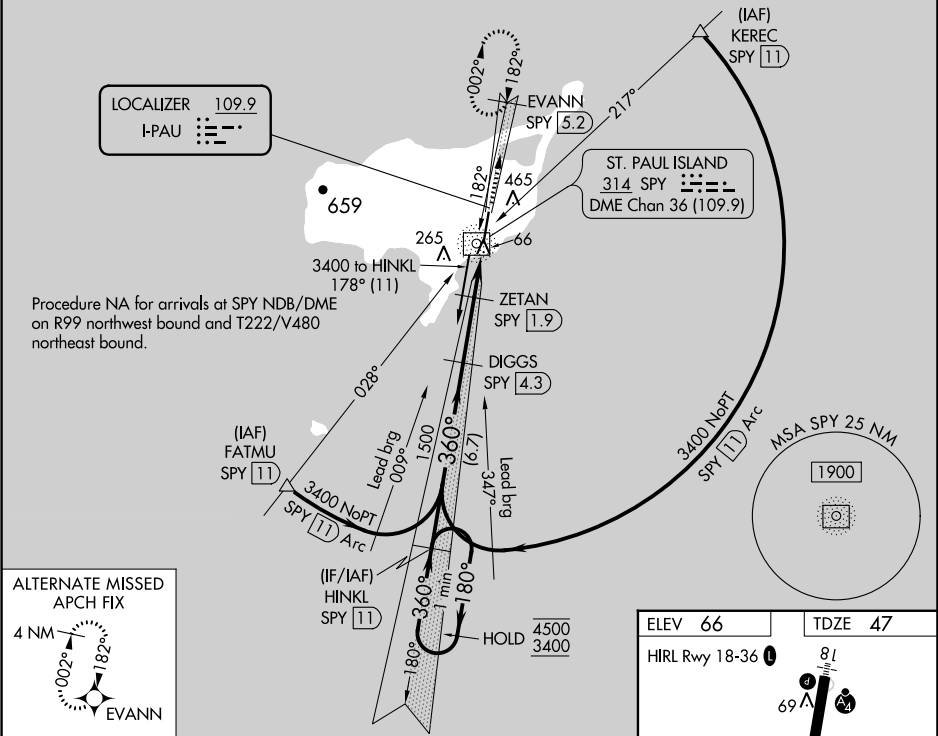

One Minute Holding Pattern	HINKL SPY 11	DIGGS SPY 4.3	2700 I-PAU N crs (360°)	EVANN SPY 5.2
	4500 3400 180° 360° 360° 1500	1480	ZETAN SPY 1.9	
GS 3.00° TCH 50	6.7 NM	2.4 NM	1 NM	1 NM
CATEGORY	A	B	C	D
S-ILS 36		247-¾ 200 (200-¾)		
S-LOC 36		380-¾ 333 (400-¾)		
CIRCLING	800-1 734 (800-1)	800-2 734 (800-2)	800-2¼ 734 (800-2¼)	

