
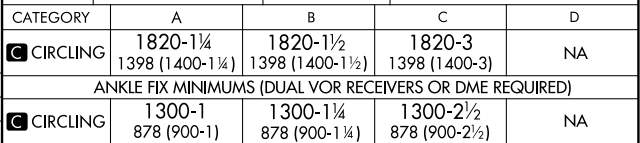



24081

VOR-A
SUSSEX (FWN)

MISSED APPROACH: Climbing right turn to 3000 direct SAX VORTAC and hold.

UNICOM
122.7 (CTAF)

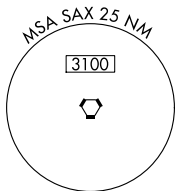

SUSSEX (FWN)
VOR-A