

VOR/DME FLM 117.0 Chan 117	APP CRS 107°	Rwy Idg TDZE Apt Elev	N/A N/A 913
--	------------------------	-----------------------------	--



VOR/DME-A
FLEMING-MASON (FGX)

T When local altimeter setting not received, use Lexington
A NA altimeter setting and increase all MDA 140 feet.

MISSED APPROACH: Climbing right turn to 2500 via heading 340° and FLM VOR/DME R-107 to PHLOX/FLM 22 DME and hold.

AWOS-3 118.125	INDIANAPOLIS CENTER 124.225 360.725	UNICOM 123.0 (CTAF) 0
--------------------------	---	---------------------------------

Procedure NA for arrivals at FLM VOR/DME
via airway radials 094 CW 150.

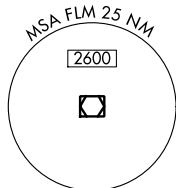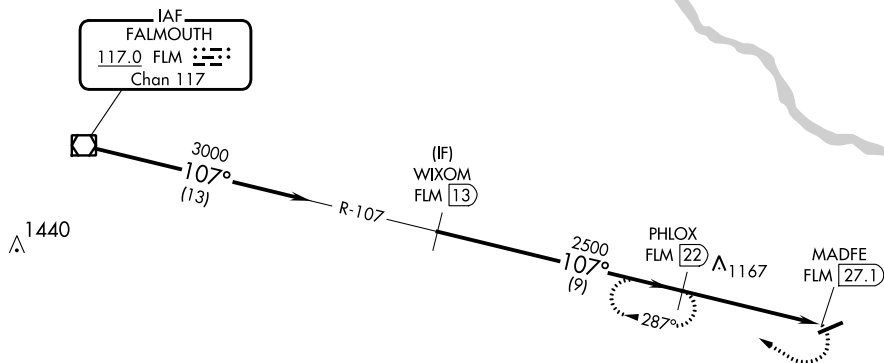

FLM VOR/DME

WIXOM FLM 113

PHLOX FLM 22

MADFE FLM 27.1

3000

107°

3000

2500

13 NM

9 NM

5.1 NM

hdg 340°
FLM R-107

CATEGORY	A	B	C	D
CIRCLING	1900-1¼ 987 (1000-1¼)	1900-1½ 987 (1000-1½)	1900-3	987 (1000-3)

