

VOR/DME MOX <b>109.6</b> Chan <b>33</b>	APP CRS <b>144°</b>	Rwy Idg TDZE <b>1132</b> Apt Elev <b>1136</b>	<b>4899</b>
---	------------------------	---	-------------




# VOR RWY 14

MORRIS MUNI/CHARLIE SCHMIDT FLD (MOX)

**NA** Circling NA to Rwys 4 and 22. VDP NA when using Benson altimeter setting. When local altimeter setting not received, use Benson altimeter setting and increase all MDAs 60 feet and increase S-14 and Circling visibility Cat C ¼ SM.

MISSED APPROACH: Climb to 3000 then left turn direct MOX VOR/DME and hold.

AWOS-3PT <b>118.6</b>	MINNEAPOLIS CENTER <b>126.1 269.2</b>	UNICOM <b>122.8 (CTAF)</b>
--------------------------	--	-------------------------------

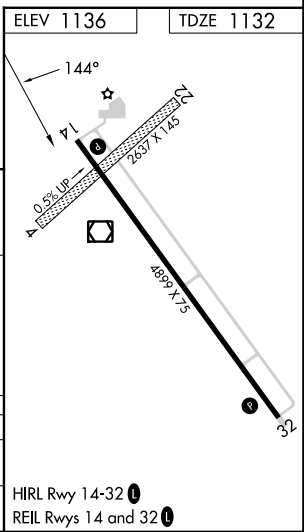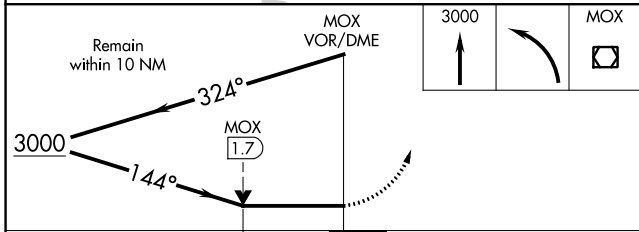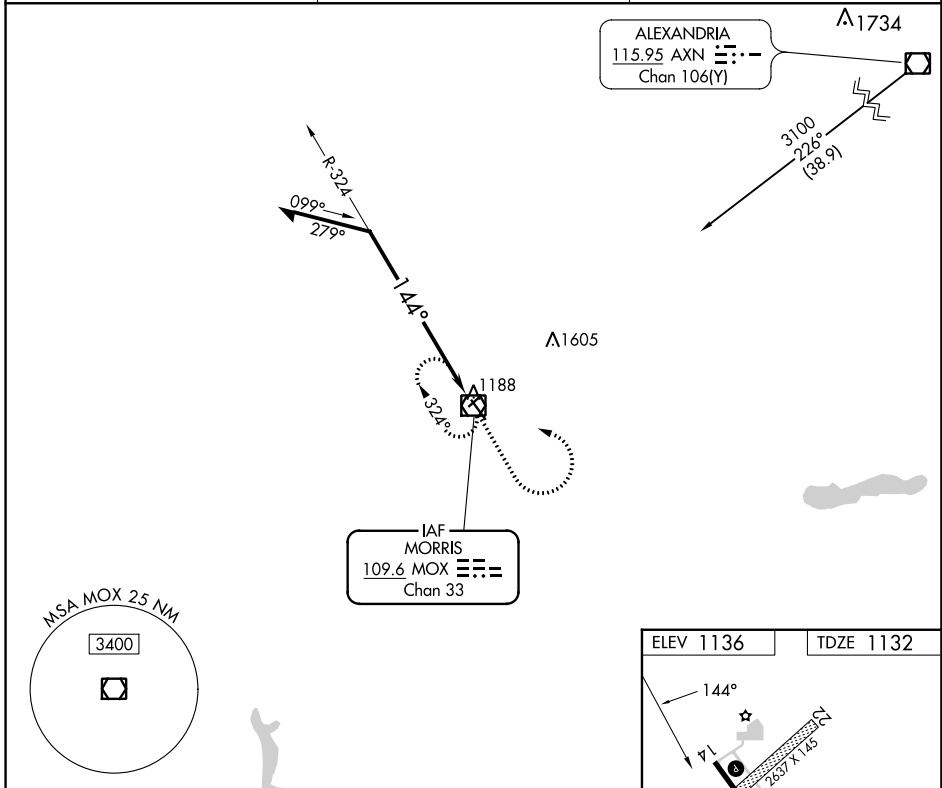

CATEGORY	A	B	C	D
S-14	1640-1	508 (600-1)	1640-1 3/8 508 (600-1 3/8)	NA
<b>C</b> CIRCLING	1640-1	504 (600-1)	1860-2 724 (800-2)	NA