


VORTAC FWA 117.8 Chan 125	APP CRS 145°	Rwy Idg TDZE Apt Elev	8001 802 815
---	------------------------	-----------------------------	---

VOR or TACAN RWY 14


FORT WAYNE INTL (FWA)

DME or RADAR required.		MISSED APPROACH: Climb to 3000 on FWA R-134 to OSBER INT/FWA 22 DME and hold.		
ATIS 121.25 360.825	FORT WAYNE APP CON 127.2 284.6	FORT WAYNE TOWER 119.1 269.325	GND CON 121.9 348.6	CLNC DEL 124.75

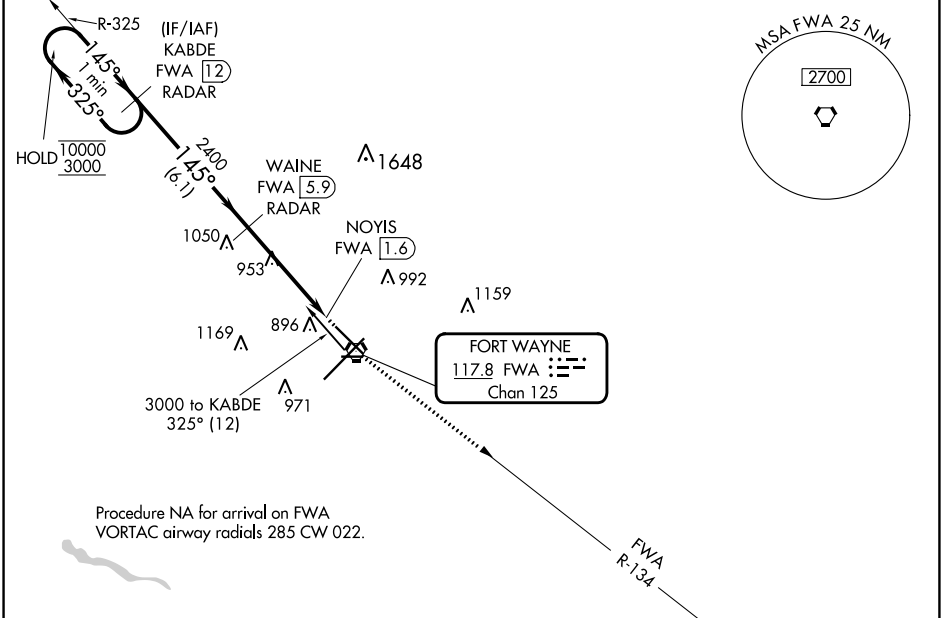

EC-2, 03 OCT 2024 to 31 OCT 2024

EC-2, 03 OCT 2024 to 31 OCT 2024

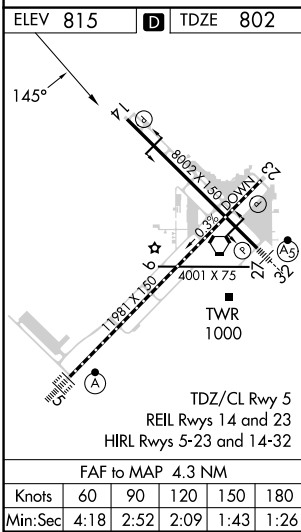

One Minute Holding Pattern	KABDE FWA 12 RADAR	WAINE FWA 5.9 RADAR	3000	FWA R-134	OSBER
10000 ← 325°	145° →	145°	2400	NOYIS FWA 1.6	
		3.05° TCH 53			
	6.1 NM	3.4 NM	0.9	0.5	
CATEGORY	A	B	C	D	E
S-14	1280-1	478 (500-1)	1280-1½ 478 (500-1½)	1280-1½ 478 (500-1½)	1280-1¾ 478 (500-1¾)
<input checked="" type="checkbox"/> CIRCLING	1300-1	485 (500-1)	1360-1½ 545 (600-1½)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)