
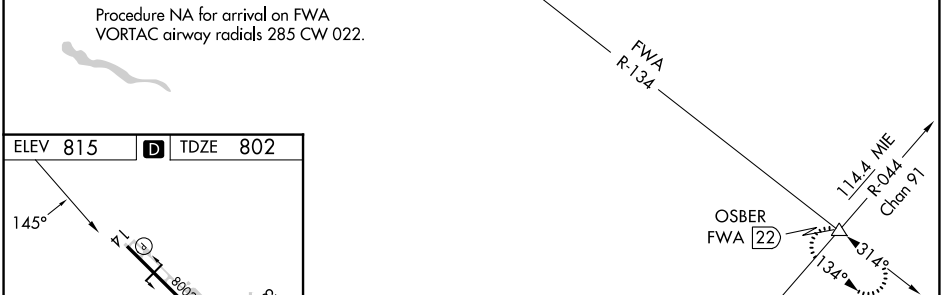


VORTAC FWA 117.8 Chan 125	APP CRS 145°	Rwy Idg TDZE Apt Elev	8001 802 815
---	------------------------	-----------------------------	---

VOR or TACAN RWY 14

FORT WAYNE INTL (FWA)

DME or RADAR required.		MISSED APPROACH: Climb to 3000 on FWA R-134 to OSBER INT/FWA 22 DME and hold.		
ATIS 121.25	360.825	FORT WAYNE APP CON 127.2	284.6	FORT WAYNE TOWER 119.1
		269.325	GND CON 121.9	348.6
		CLNC DEL 124.75		

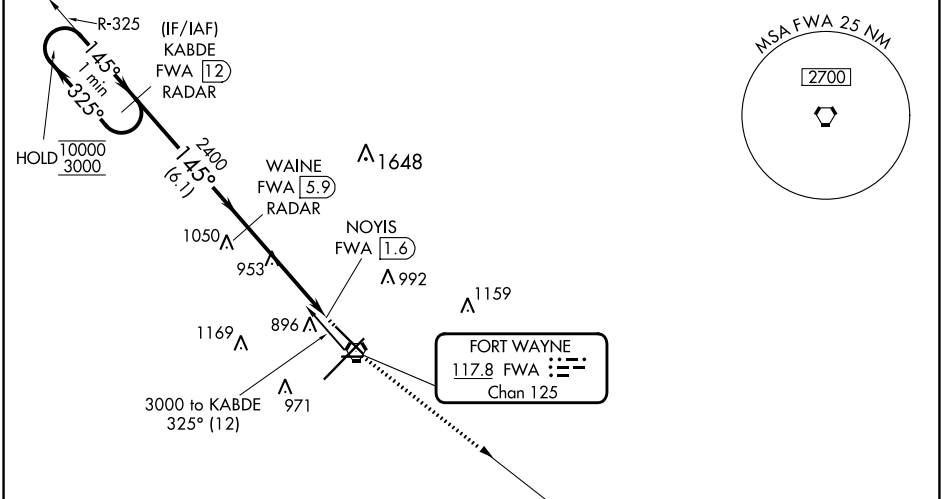

ELEV 815	D	TDZE 802			
TDZ/CL Rwy 5 REIL Rws 14 and 23 HIRL Rws 5-23 and 14-32					
FAF to MAP 4.3 NM					
Knots	60	90	120	150	180
Min:Sec	4:18	2:52	2:09	1:43	1:26

One Minute Holding Pattern	KABDE FWA 12 RADAR	WAINE FWA 5.9 RADAR	3000	FWA R-134	OSBER
10000 ← 325°	145° →	145°	2400	NOYIS FWA 1.6	
3000		3.05°	TCH 53		
	6.1 NM	3.4 NM	0.9	0.5	
CATEGORY	A	B	C	D	E
S-14	1280-1	478 (500-1)	1280-1½ 478 (500-1½)	1280-1½ 478 (500-1½)	1280-1¾ 478 (500-1¾)
<input checked="" type="checkbox"/> CIRCLING	1300-1	485 (500-1)	1360-1½ 545 (600-1½)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)

EC-2, 28 NOV 2024 to 26 DEC 2024

EC-2, 28 NOV 2024 to 26 DEC 2024