
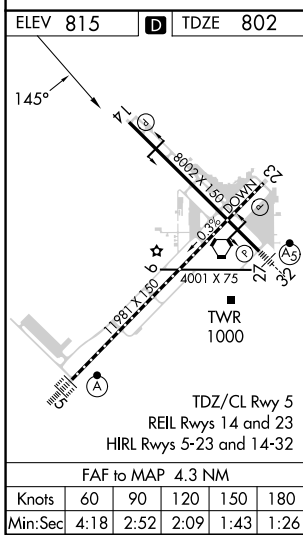


VORTAC FWA <b>117.8</b> Chan <b>125</b>	APP CRS <b>145°</b>	Rwy Idg TDZE Apt Elev	<b>8001</b> <b>802</b> <b>815</b>
---	------------------------	-----------------------------	---

# VOR or TACAN RWY 14

FORT WAYNE INTL (FWA)

DME or RADAR required.		MISSED APPROACH: Climb to 3000 on FWA R-134 to OSBER INT/FWA 22 DME and hold.		
ATIS <b>121.25 360.825</b>	FORT WAYNE APP CON <b>127.2 284.6</b>	FORT WAYNE TOWER <b>119.1 269.325</b>	GND CON <b>121.9 348.6</b>	CLNC DEL <b>124.75</b>

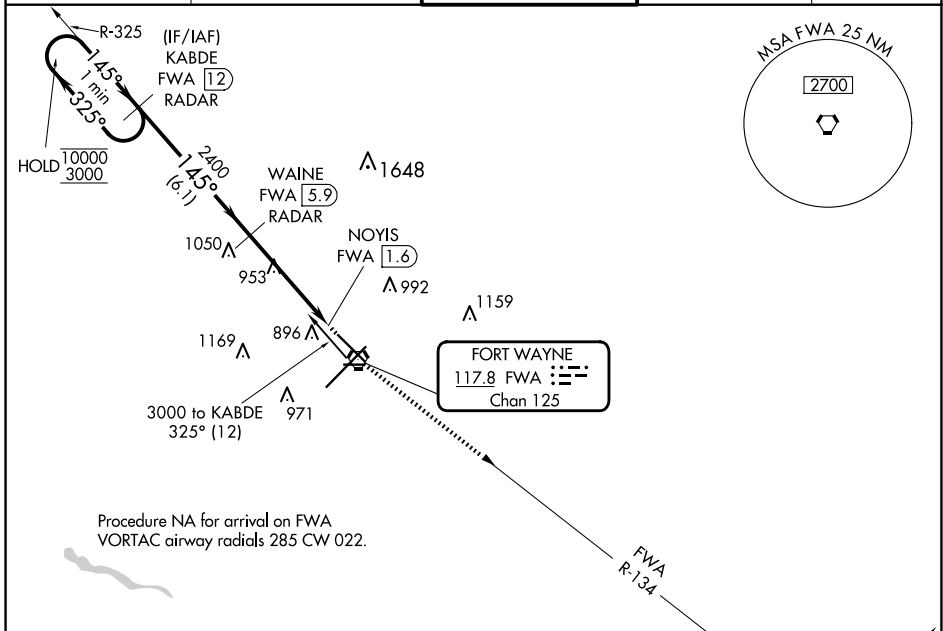

CATEGORY	A	B	C	D	E
	1280-1	478 (500-1)	1280-1 3/8 478 (500-1 3/8)	1280-1 1/2 478 (500-1 1/2)	1280-1 3/4 478 (500-1 3/4)
<input checked="" type="checkbox"/> CIRCLING	1300-1	485 (500-1)	1360-1 1/2 545 (600-1 1/2)	1520-2 1/4 705 (800-2 1/4)	1520-2 1/2 705 (800-2 1/2)

EC-2, 20 MAR 2025 to 17 APR 2025

EC-2, 20 MAR 2025 to 17 APR 2025