

VORTAC BRO	APP CRS	Rwy Idg	7257
116.3	311°	TDZE	36
Chan 110		Apt Elev	36

VOR Y or TACAN RWY 31

VALLEY INTL (HRL)



DME required.

When local altimeter setting not received, use Port Isabel altimeter setting and increase all MDAs 60 feet.



MISSED APPROACH: Climbing right turn to 2000 on BRO R-311 to ZOCKE/12 DME and hold.

ATIS	VALLEY APP CON	HARLINGEN TOWER ★	GND CON	UNICOM
124.85	120.7 279.5	119.3 (CTAF) 317.6	121.7	122.95

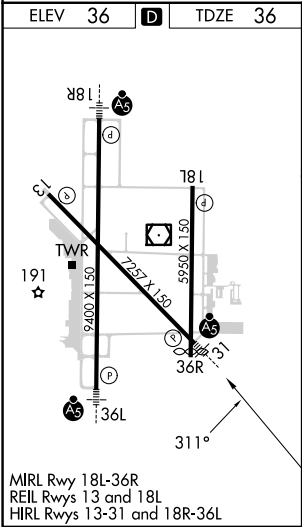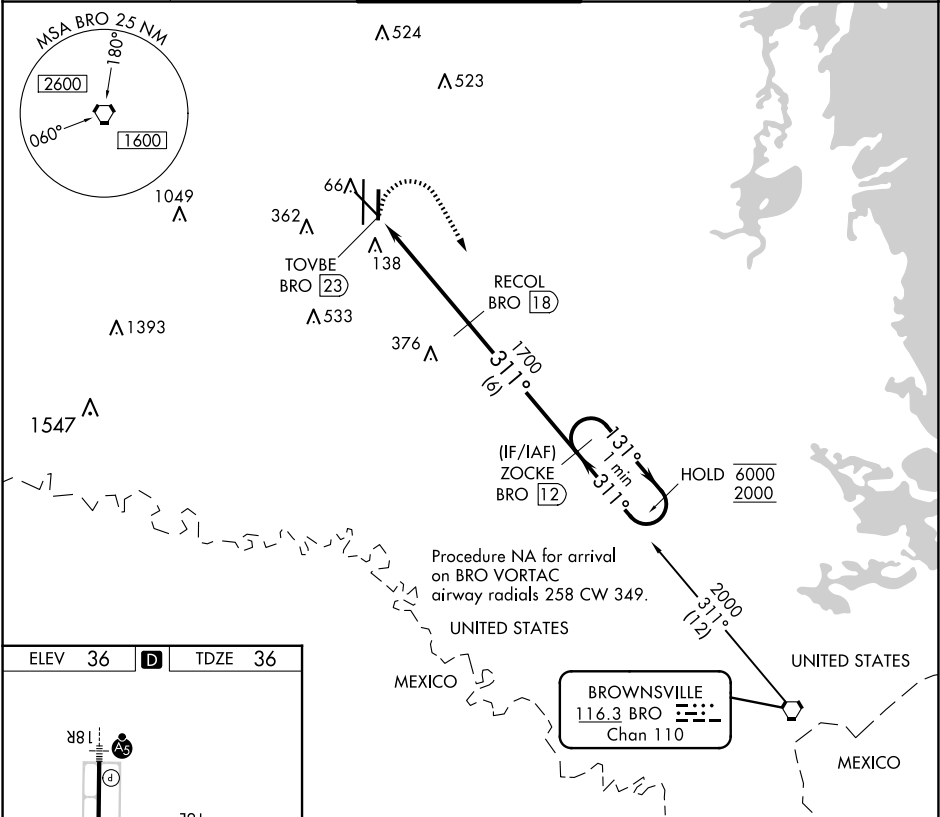

2000	ZOCKE BRO 12	ZOCKE BRO 12	One Minute Holding Pattern	
BRO R-311	RECOL BRO 18	131°	6000	2000
TOVBE BRO 23	311°	1700	311°	2000
	3.03° TCH 55			
	5 NM	6 NM		
CATEGORY	A	B	C	D
S-31	1000-3/4 964 (1000-3/4)	1000-1 964 (1000-1)	1000-2 1/2 964 (1000-2 1/2)	
CIRCLING	1000-1 1/4 964 (1000-1 1/4)	1000-1 1/2 964 (1000-1 1/2)	1000-3 964 (1000-3)	

SC-3, 17 APR 2025 to 15 MAY 2025

SC-3, 17 APR 2025 to 15 MAY 2025