

AL-6039 (FAA)



DALLAS-FORT WORTH INTL (DFW)
DALLAS-FORT WORTH, TEXAS

JOE POOL SEVEN DEPARTURE

TOP ALTITUDE:
RWYS 13L/R, 17L/C/R, 18L/R,
35L/C/R, 36L/R: 10000
RWYS 31L/R: 5000

LONE STAR DEP CON
125.125 353.95 (Rwys 17C/R, 18L/R)
126.475 363.15 (Rwys 36L/R)
118.55 290.35 (Rwys 35L/C)
D-ATIS DEP 135.925
CLNC DEL 128.25
CPDLC
GND CON
121.65 121.8 (EAST)
121.85 (WEST)
DFW TOWER
126.55 127.5 (EAST)
124.15 134.9 (WEST)

RADAR and DME required.

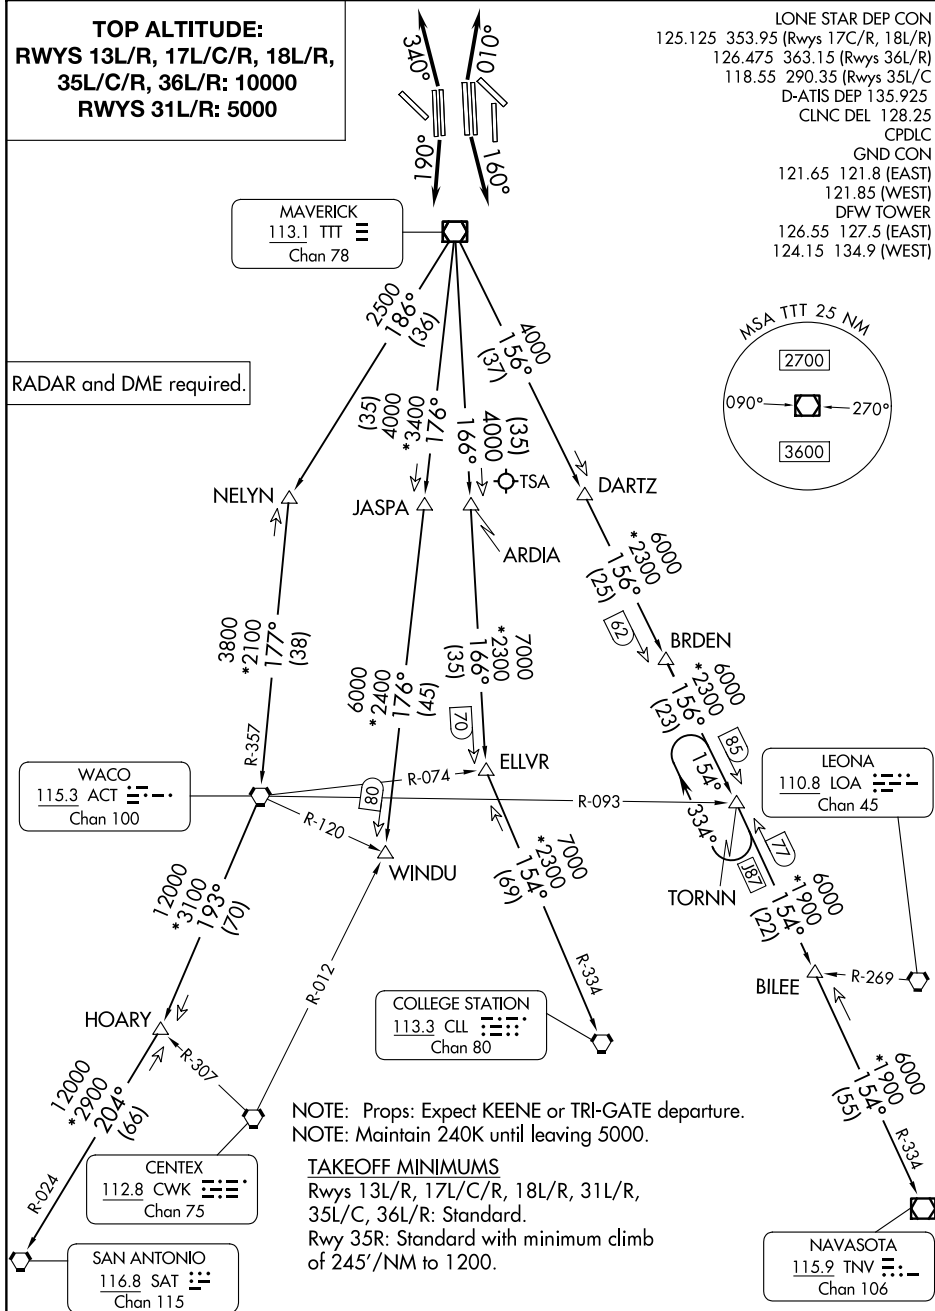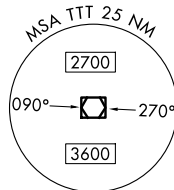

(CONTINUED ON FOLLOWING PAGE)

NOTE: Chart not to scale.

JOE POOL SEVEN DEPARTURE

DALLAS-FORT WORTH, TEXAS
DALLAS-FORT WORTH INTL (DFW)

(JPOOL7.TTT) 25JAN24

SC-2, 17 APR 2025 to 15 MAY 2025

DEPARTURE ROUTE DESCRIPTION
TAKEOFF RUNWAYS 31L/R: Climb on assigned heading, maintain 5000, thence.... TAKEOFF RUNWAYS 13L/R, 17L, 35R: Climb on assigned heading, maintain 10000, thence. . . TAKEOFF RUNWAYS 17C/R: Climb on heading 160°, maintain 10000, thence. . . . TAKEOFF RUNWAYS 18L/R: Climb on heading 190°, maintain 10000, thence. . . . TAKEOFF RUNWAYS 35L/C: Climb on heading 010°, maintain 10000, thence. . . . TAKEOFF RUNWAYS 36L/R: Climb on heading 340°, maintain 10000, thence. for RADAR vectors to appropriate route and expect filed altitude 10 minutes after departure. COLLEGE STATION TRANSITION (JPOOL7.CLL): From over TTT VOR/DME on TTT R-166 to ELLVR, then on CLL R-334 to CLL VORTAC. ELLVR TRANSITION (JPOOL7.ELLVR): From over TTT VOR/DME on TTT R-166 to ELLVR. HOARY TRANSITION (JPOOL7.HOARY): From over TTT VOR/DME on TTT R-186 to NELYN, then on ACT R-357 to ACT VORTAC, then on ACT R-193 to HOARY. NAVASOTA TRANSITION (JPOOL7.TNV): From over TTT VOR/DME on TTT R-156 to TORNN, then on TNV R-334 to TNV VOR/DME. SAN ANTONIO TRANSITION (JPOOL7.SAT): From over TTT VOR/DME on TTT R-186 to NELYN, then on ACT R-357 to ACT VORTAC, then on ACT R-193 to HOARY, then on SAT R-024 to SAT VORTAC. TORNN TRANSITION (JPOOL7.TORNN): From over TTT VOR/DME on TTT R-156 to TORNN. WACO TRANSITION (JPOOL7.ACT): From over TTT VOR/DME on TTT R-186 to NELYN, then on ACT R-357 to ACT VORTAC. WINDU TRANSITION (JPOOL7.WINDU): From over TTT VOR/DME on TTT R-176 to WINDU. NOTE: COLLEGE STATION Transition: For piston and turboprop aircraft destined to HOU, EFD, GLS, or LBX. Also for all other aircraft types destined to all other Houston terminal area airports except IAH, CXO, DWH, T78 or 6R3. NOTE: ELLVR Transition: For turbojet aircraft destined to HOU, EFD, GLS, or LBX. NOTE: SAN ANTONIO Transition: For aircraft overflying Centex and San Antonio. NOTE: TORNN Transition: Only for aircraft destined IAH, CXO, DWH, T78 or 6R3. NOTE: WACO Transition: For aircraft inbound to Waco or Gray terminal area airports. NOTE: WINDU Transition: For aircraft inbound to Austin or San Antonio terminal area.