

LOC/DME I-CAE
110.3
Chan **40**

APP CRS
112°

Rwy Ldg **8601**
TDZE **236**
Apt Elev **236**

ILS or LOC RWY 11
COLUMBIA METRO (CAE)


DME or RADAR required for LOC only.

▼ For inop ALS, increase S-ILS 11 Cat E visibility to RVR 4000, S-LOC 11 Cats C/D/E visibility to 1½ SM, and BEHRN Minimums S-LOC 11 Cat E visibility to 1¾ SM.

ALSF-2

MISSED APPROACH: Climb to 1100 then climbing right turn to 2300 direct CAE VORTAC and hold, continue climb-in-hold to 2300. (TACAN aircraft confine on CAE VORTAC R-140 to ADCOM INT/CAE VORTAC 10 DME and hold NW, right turn, 140° inbound)

ATIS 120.15	COLUMBIA APP CON 124.15 338.2 (110°-289°) 133.4 285.6 (290°-109°)	COLUMBIA TOWER 119.5 257.8	GND CON 121.9 348.6
-----------------------	---	--------------------------------------	-------------------------------

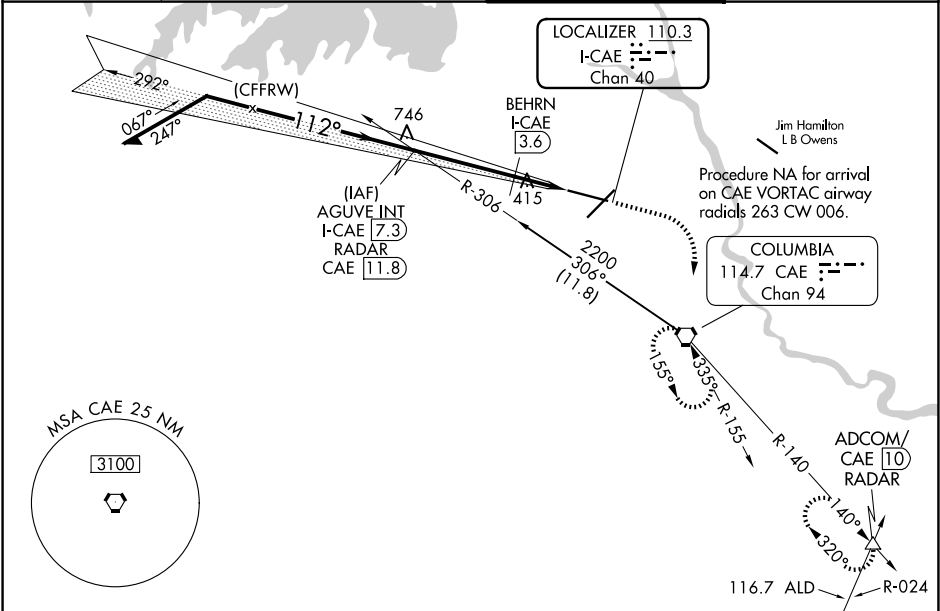

AGUVE INT
I-CAE **7.3**
RADAR

1100 2300 CAE

ELEV **236** TDZE **236**

Remain within 1.5 NM

2200 292° 112° 2100 900

GS 3.00° TCH 59

Use I-CAE DME when on the localizer course.

3.7 NM 0.8 NM 1.2 NM

CATEGORY	A	B	C	D	E
S-ILS 11	436/18 200 (200-½)				
S-LOC 11	900/24 664 (700-½)	900-1½ 664 (700-½)			
CIRCLING	900-1 664 (700-1)	1040-2¼ 804 (900-2¼)	1040-2½ 804 (900-2½)	1040-2¾ 804 (900-2¾)	
BEHRN MINIMUMS (DME REQUIRED)					
S-LOC 11	680/24 444 (500-½)	680/45 444 (500-¾)			
CIRCLING	740-1 504 (600-1)	860-1 624 (700-1)	1040-2¼ 804 (900-2¼)	1040-2½ 804 (900-2½)	1040-2¾ 804 (900-2¾)

REIL Rwy 23
TDZ/CL Rwy 11
HIRL Rws 5-23 and 11-29

FAF to MAP 5.7 NM

Knots 60 90 120 150 180

Min:Sec 5:42 3:48 2:51 2:17 1:54

TWR

8601 X 150

0.5% UP

0.5% DOWN

8601 X 150

112°