


WAAS CH 93609 W05A	APP CRS 050°	Rwy Ldg 11981 TDZE 815 Apt Elev 815
--	------------------------	--

RNAV (GPS) RWY 5

FORT WAYNE INTL (FWA)

▼ ASR For uncompensated Baro-VNAV systems, procedure NA below -16°C (4°F) or above 47°C (116°F). DME/DME RNP-0.3 NA. For inop ALS, increase LPV Cat E visibility to RVR 4000, LNAV/VNAV all Cats visibility to 1½ SM and LNAV Cat C/D/E visibility to 1¾ SM.	ALSF-2 ⓘ ⓐ ▬ ▬ ▬ ▬ ▬	MISSED APPROACH: Climb to 3000 direct SLYDR and hold.	ATIS 121.25 360.825	FORT WAYNE APP CON 127.2 284.6	FORT WAYNE TOWER 119.1 269.325	GND CON 121.9 348.6	CLNC DEL 124.75
---	---	---	--	---	---	--	--

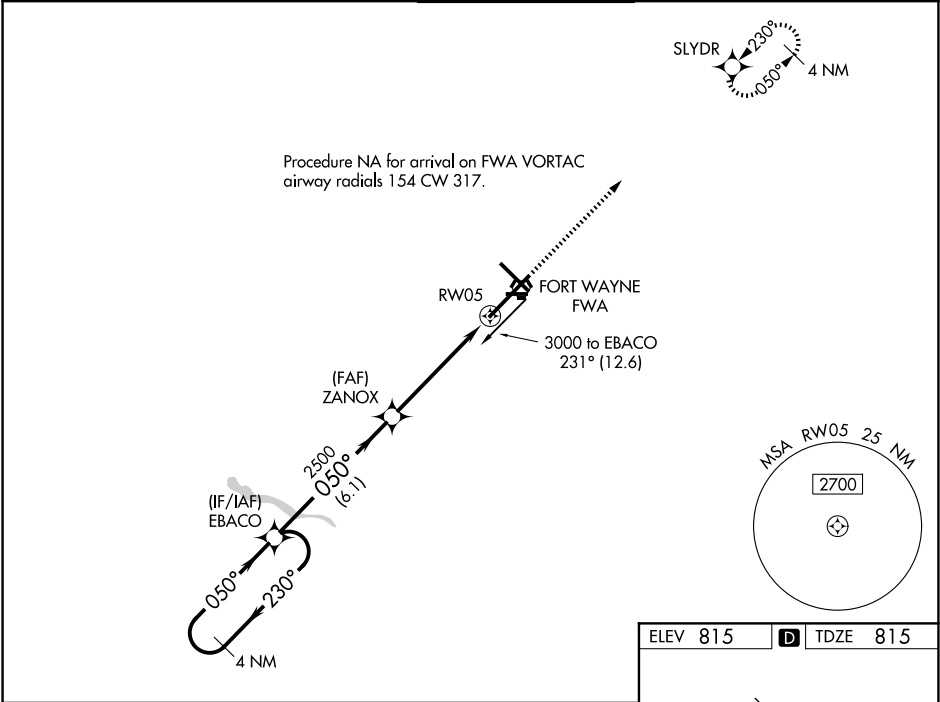

4 NM Holding Pattern EBACO ZANOX 3000 230° 050° 050° 2500 2500 * 1.4 NM to RW05 RW05 GP 3.00° TCH 55° 6.1 NM 3.7 NM 1.4 NM 3000 ↑ SLYDR * LNAV only.					
CATEGORY	A	B	C	D	E
LPV DA	1065/18 250 (300-½)				
LNAV/VNAV DA	1275/60 460 (500-1¼)				
LNAV MDA	1300/24	485 (500-½)	1300/50 485 (500-1)		
CIRCLING	1300-1	485 (500-1)	1420-1¾ 605 (700-1¾)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)

