
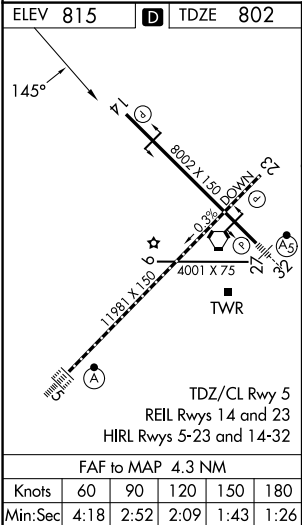


VORTAC FWA	APP CRS	Rwy Ldg	8001
117.8	145°	TDZE	802
Chan 125		Apt Elev	815

VOR or TACAN RWY 14

FORT WAYNE INTL (FWA)

DME or RADAR required.		MISSED APPROACH: Climb to 3000 on FWA R-134 to OSBER INT/FWA 22 DME and hold.		
ATIS		FORT WAYNE APP CON	FORT WAYNE TOWER	GND CON
121.25 360.825		127.2 284.6	119.1 269.325	121.9 348.6
				CLNC DEL
				124.75

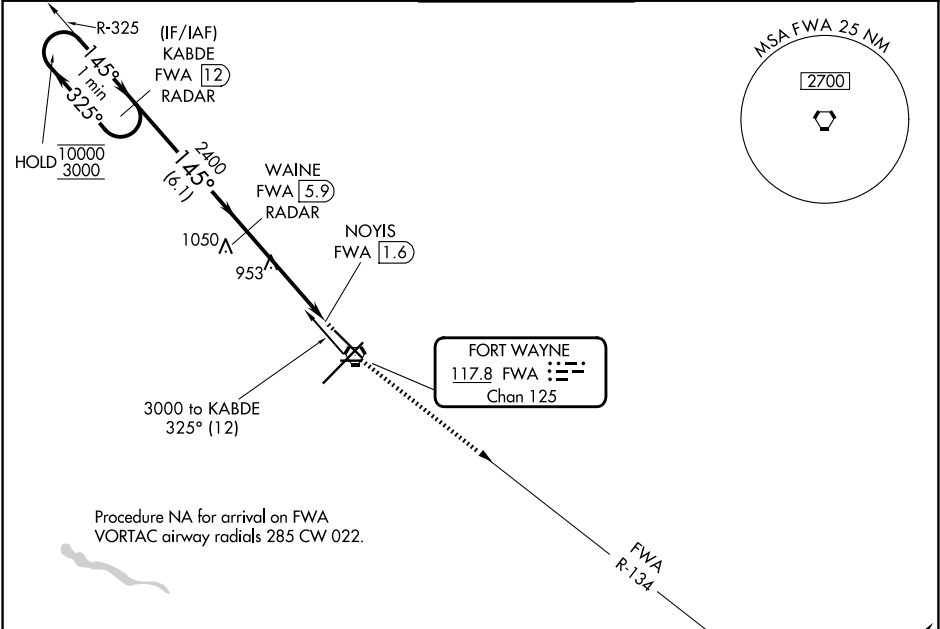

One Minute Holding Pattern		KABDE FWA 12 RADAR	WAINE FWA 5.9 RADAR	3000 FWA R-134	OSBER FWA 22
10000 3000		325° 145°	145°	2400	3000
		6.1 NM	3.4 NM	0.9	0.5
CATEGORY	A	B	C	D	E
S-14	1280-1	478 (500-1)	1280-1 3/8 478 (500-1 3/8)	1280-1 1/2 478 (500-1 1/2)	1280-1 3/4 478 (500-1 3/4)
CIRCLING	1300-1	485 (500-1)	1360-1 1/2 545 (600-1 1/2)	1520-2 1/4 705 (800-2 1/4)	1520-2 1/2 705 (800-2 1/2)