




VORTAC FWA	APP CRS	Rwy Ldg
117.8	054°	11981
Chan 125	TDZE	815
	Apt Elev	815

VOR or TACAN RWY 5
FORT WAYNE INTL (FWA)

DME or RADAR required.	ALSIF-2	MISSED APPROACH: Climbing right turn to 3000 on FWA VORTAC R-134 to OSBER INT/FWA 22 DME and hold.
For inop ALS, increase S-5 Cat C/D/E visibility to 1½ SM.		

ATIS	FORT WAYNE APP CON	FORT WAYNE TOWER	GND CON	CLNC DEL
121.25 360.825	127.2 284.6	119.1 269.325	121.9 348.6	124.75

Procedure NA for arrival on FWA VORTAC
airway radials 198 CW 294.

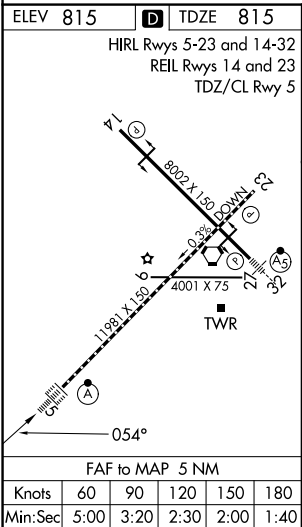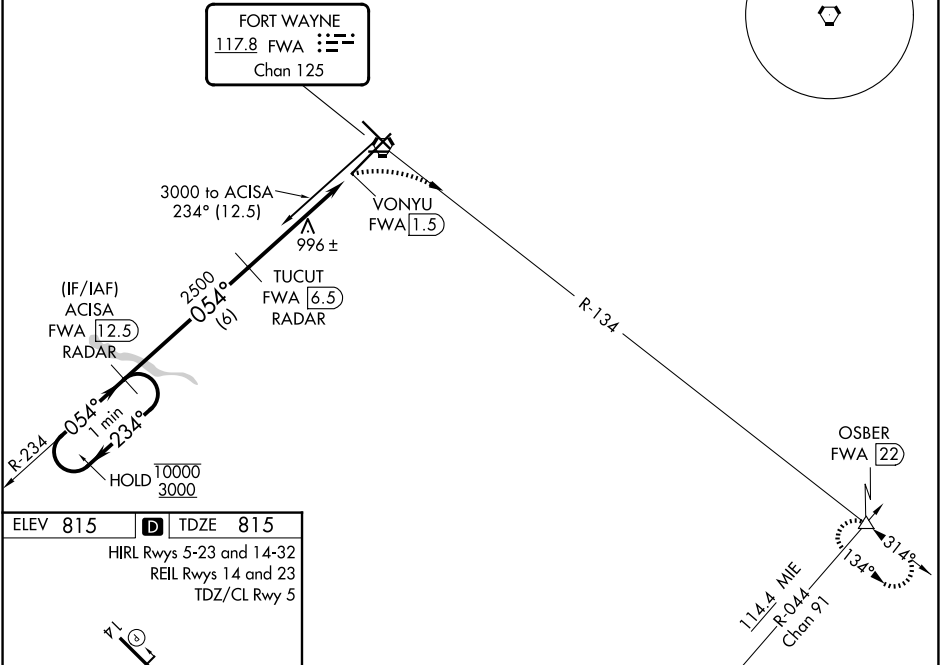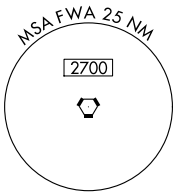

One Minute Holding Pattern		ACISA FWA 12.5 RADAR	TUCUT FWA 6.5 RADAR	3000 FWA R-134	OSBER
10000 3000		234° 054°	054°	2500	3.07° TCH 55
		6 NM	3.6 NM	1.4	
CATEGORY	A	B	C	D	E
S-5	1320/24	505 (600-½)	1320/55	505 (600-1)	1320/60 505 (600-1¼)
CIRCLING	1320-1	505 (600-1)	1360-1½ 545 (600-1½)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)

EC-2, 27 NOV 2025 to 25 DEC 2025

EC-2, 27 NOV 2025 to 25 DEC 2025