

(SNDRS3.SNDRS) 25219

SNDRS THREE DEPARTURE (RNAV)

AL-276 (FAA)

SELFRIIDGE ANGB (KMTC')

MOUNT CLEMENS, MICHIGAN

DEPARTURE ROUTE DESCRIPTION

TAKEOFF RUNWAY 1: Climb on heading 007° or as assigned by ATC, thence....

TAKEOFF RUNWAY 19: Climb on heading 187° or as assigned by ATC, thence....

....for RADAR vectors to JWELS, then on track 218° to SNDRS, then on (transition). Maintain ATC assigned altitude, expect filed altitude 10 minutes after departure.

BGHR T TRANSITION (SNDRS3.BGHR T):

TORR T TRANSITION (SNDRS3.TORR T):

TOP ALTITUDE:
ASSIGNED BY ATC

RNAV-1 DME/DME/IRU or GPS.

RADAR required.

SELFRIIDGE DEP CON ★
119.6 391.9
ATIS
125.325 270.1
CLNC DEL
128.3 275.8
GND CON
128.3 275.8
SELFRIIDGE TOWER ★
120.15 225.4


← 007°

← 187° →


N

NOTE: Turbojet departures at/above 10000, maintain 280K until advised by ATC.

NOTE: TORR Transition: For use by KIND and KCVG area arrivals only and flights filed at or below FL220, or as assigned by ATC.

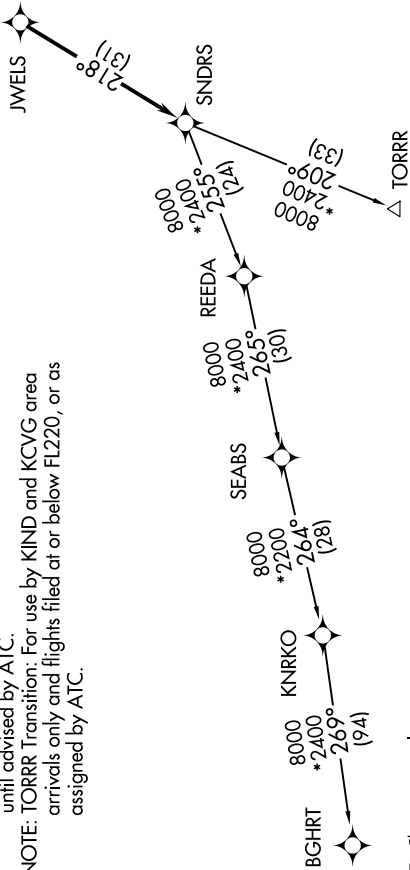

TAKEOFF MINIMUMS:
Rwy 1: Standard.
Rwy 19: Standard with minimum climb of 235' per NM to 1500.

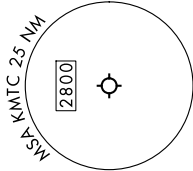

NOTE: Chart not to scale.

SNDRS THREE DEPARTURE (RNAV)

(SNDRS3.SNDRS) 16MAY24

MOUNT CLEMENS, MICHIGAN

SELFRIIDGE ANGB (KMTC')