

HI-ILS Z or LOC Z RWY 19L

LOC I-VAD <u>109.3</u>	APCH CRS 186°	Rwy Idg 9300 TDZE 233 Arpt Elev 233	[USAF]	MOODY AFB (KVAD)
----------------------------------	-------------------------	--	--------	------------------



RADAR or DME required

T * When ALS inop, increase RVR to 40 and vis to $\frac{3}{4}$ mile.
** When ALS inop, increase vis to $1\frac{3}{8}$ miles.


ALSF-1

MISSED APPROACH: Climb to 3000 on VAD TACAN R-186 to EQUIP and hold.


ATIS ★ 273.5	VALDOSTA APP CON ★ 126.6 285.6	TOWER ★ 128.45 (CTAF) 257.625	GND CON 138.95 275.8
-----------------	-----------------------------------	----------------------------------	-------------------------

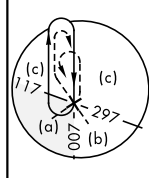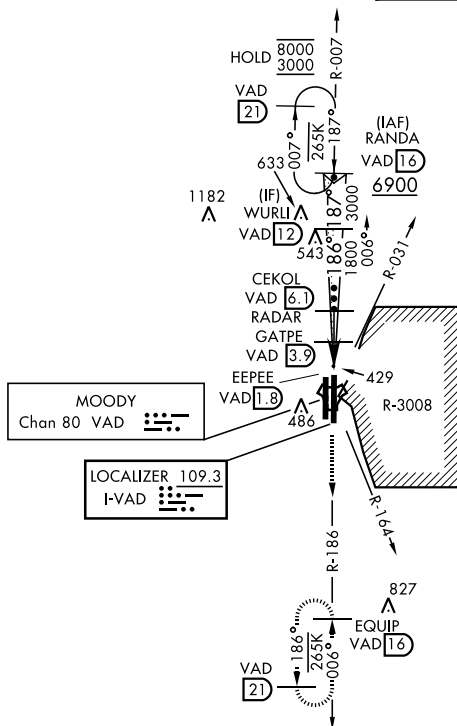

CAUTION: Remain west of VAD R-031 and VAD R-164 when R-3008 is active.

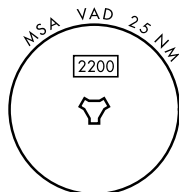

EMERG SAFE ALT 100 NM 3300

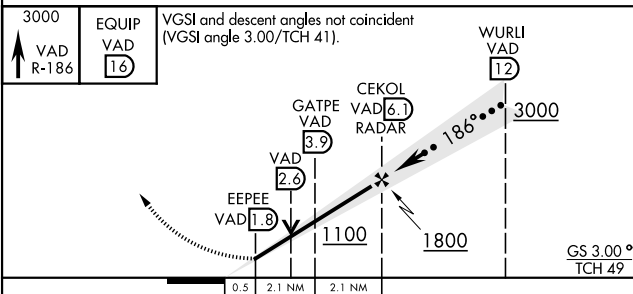

CATEGORY	C	D	E
S-ILS 19L*	433/24	200	(200-½)
S-LOC 19L**	680/45	447	(500-¾)
CIRCLING	800-1½ 567 (600-1½)	800-2	567 (600-2)

ELEV	233	TDZE	233		
HIRL all rwys					
FAF to MAP 4.3 NM					
Knots	120	140	160	180	200
Min:Sec	2:09	1:51	1:37	1:26	1:17