

VOR/DME VCT	APP CRS	Rwy Ldg	9111
109.0	127°	TDZE	115
Chan 27		Apt Elev	115

VOR RWY 13
VICTORIA RGNL (VCT)



For inop ALS, increase Cat C/D/E visibility to 1 3⁄8 SM.

MALSR

MISSED APPROACH:

Climbing left turn to 2200
direct VCT VOR/DME and
hold, continue climb-in-hold
to 2200.

ATIS 119.025	HOUSTON CENTER 135.05 353.6	VICTORIA TOWER ★ 126.075 (CTAF) 0 257.95	GND CON 120.525 239.25	UNICOM 122.7
-----------------	--------------------------------	---	---------------------------	-----------------

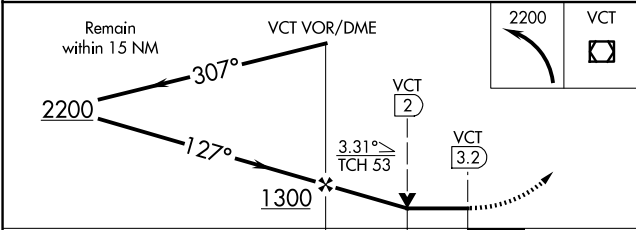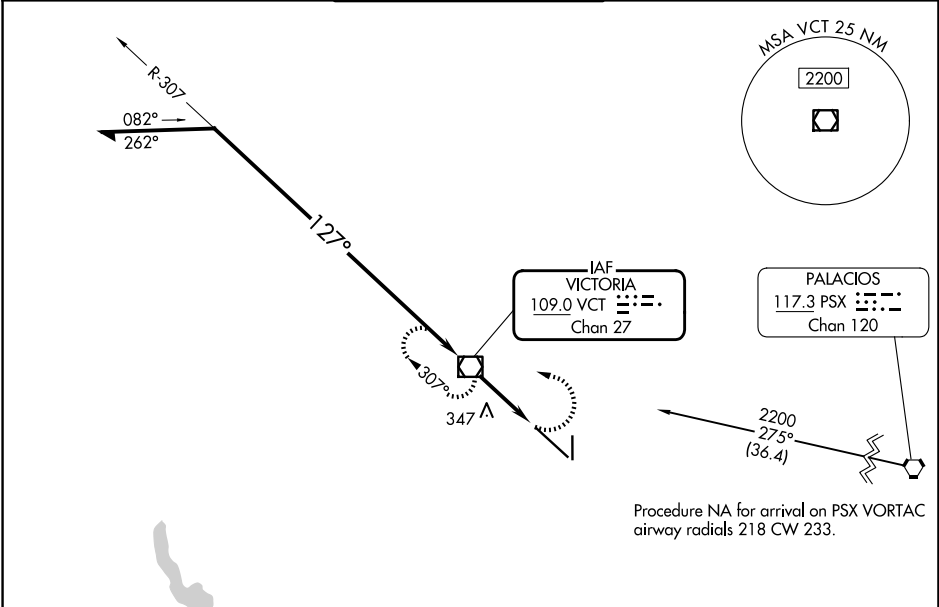

CATEGORY	A	B	C	D	E
S-13	600-1⁄2	485 (500-1⁄2)	600-1	485 (500-1)	
CIRCLING	600-1	485 (500-1)	820-2 705 (800-2)	880-2 1⁄2 765 (800-2 1⁄2)	NA

