

APP CRS	Rwy Ldg	10000
057°	TDZE	1103
	Apt Elev	1159


RNAV (GPS) Y RWY 6
SAN BERNARDINO INTL (SBD)

RNP APCH

Circling NA northwest of Rwy 6-24. When local altimeter setting not received, use Ontario altimeter setting and increase all MDA 80 feet.

MISSED APPROACH: Climb to 2800 then climbing right turn to 6000 direct PDZ VORTAC and hold, continue climb-in-hold to 6000.

D-ATIS 124.175	SOCAL APP CON 127.0 318.2	SAN BERNARDINO TOWER ★ 119.45 (CTAF) 0	GND CON 121.8	UNICOM 122.975
-------------------	------------------------------	---	------------------	-------------------

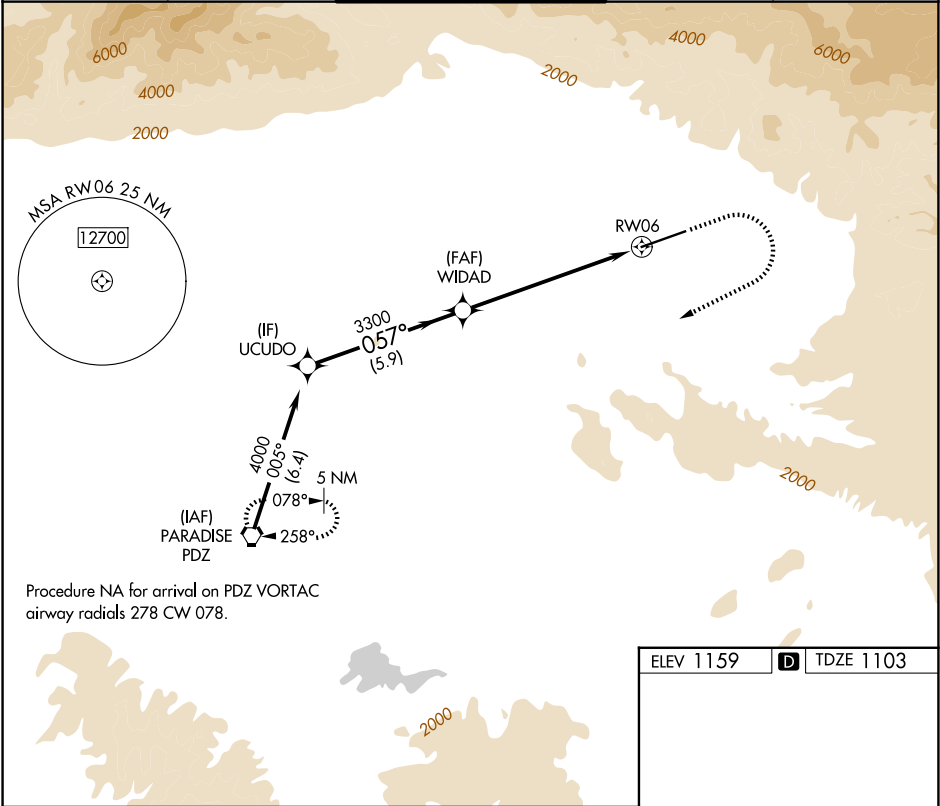

UCUDO

WIDAD

RW06

4000

3300

2800

6000

PDZ

4.1 NM to RW06

3.00° TCH 51

057°

5.9 NM

2.7 NM

4.1 NM

TWR

0.7% UP

0.8% DOWN

10000 X 200

057°

CATEGORY	A	B	C	D
LNAV MDA	2460-1¼ 1357 (1400-1¼)	2460-1½ 1357 (1400-1½)	2460-3 1357 (1400-3)	
CIRCLING	2460-1¼ 1301 (1400-1¼)	2460-1½ 1301 (1400-1½)	2460-3 1301 (1400-3)	2640-3 1481 (1500-3)

SAN BERNARDINO INTL (SBD)

RNAV (GPS) Y RWY 6