

VOR/DME MTJ	APP CRS	Rwy Ldg	7510
117.1	117°	TDZE	5723
Chan 118		Apt Elev	5759

VOR RWY 13

MONTRORSE RGNL (MTJ)

DME required.



▼

▲

Straight-in Rwy 13 at night, operational VGSI required, remain on or above VGSI glidepath until threshold. Rwy 13 helicopter visibility reduction below 1 SM NA. Circling Rwy 31 NA at night. Circling NA east of Rwy 17 and northeast of Rwy 31. When local altimeter setting not received, use Delta altimeter setting: increase all MDAs 140 feet and visibility S-13 Cats C and D ½ SM and Circling Cat C ¼ SM.

MISSED APPROACH: Climb to 6600 then climbing right turn to 9500 on MTJ VOR/DME R-297 to PAGRE/14.8 DME and hold.

ASOS 135,225	DENVER CENTER 127.1 343.65	UNICOM 122.8 (CTAF)
-----------------	-------------------------------	------------------------

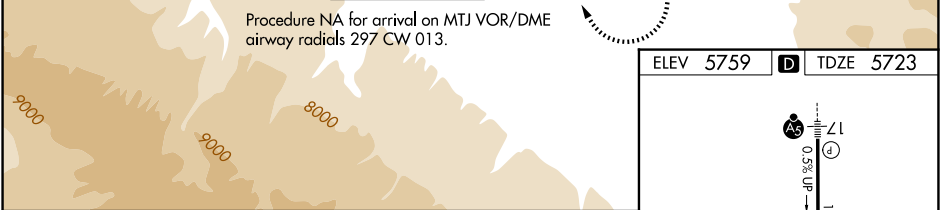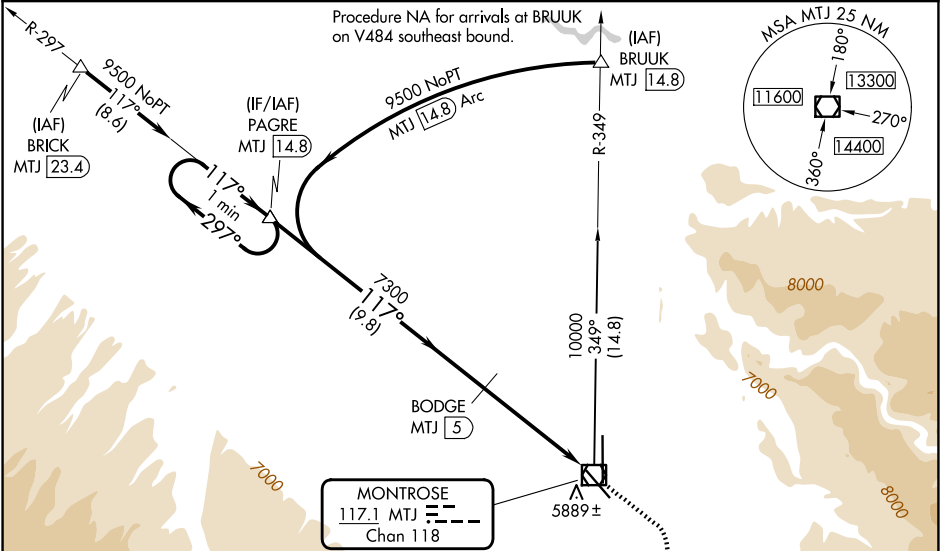

CATEGORY	One Minute Holding Pattern		PAGRE MTJ [14.8]		6600		9500		PAGRE	
S-13	6140-1		417 (400-1)		6140-1½		417 (400-1½)			
CIRCLING	6280-1 521 (600-1)		6420-1 661 (700-1)		6640-2¾ 881 (900-2¾)		6800-3 1041 (1100-3)			

