

LOC/DME I-FQV
109.7
Chan **34**

APP CRS
352°

Rwy Ldg
TDZE **177**
Apt Elev **234**

ILS or LOC RWY 35
PLATTSBURGH INTL (PBG)


DME required.
RNAV 1-GPS required.

MALSR

MISSED APPROACH: Climb to 700 then climbing right turn to 3000 direct JUTEK and hold.

▼
▲ For inop ALS, increase S-LOC 35 Cat C/D visibility to 1 SM.

ASOS 132.225	BURLINGTON APP CON ★ 121.1 278.8	UNICOM 122.7 (CTAF) ①
------------------------	--	---------------------------------

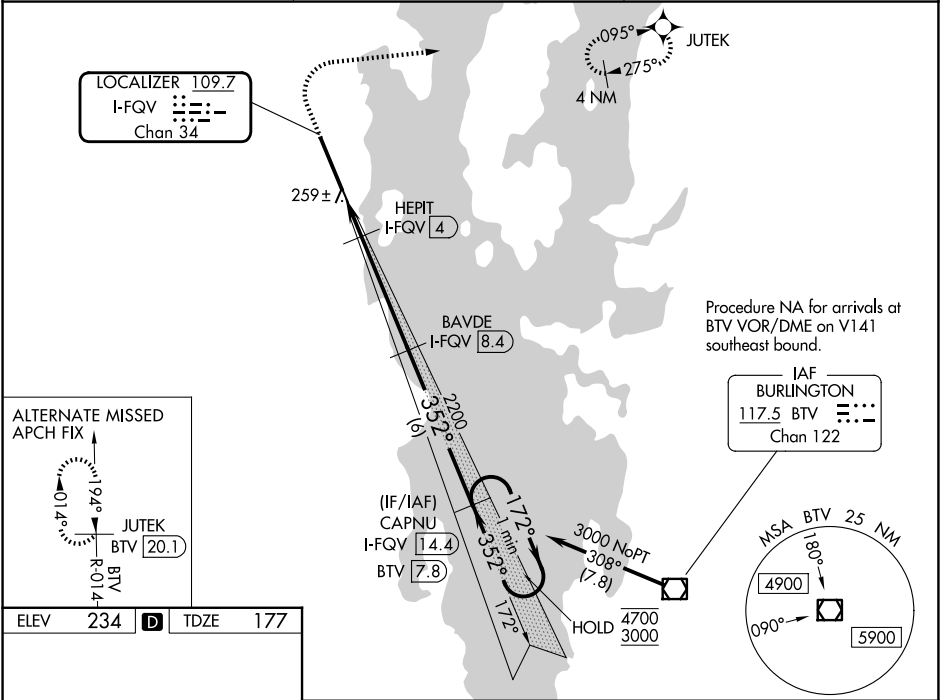

One Minute Holding Pattern				
*LOC only				
S-ILS 35 377-½ 200 (200-½)				
S-LOC 35 520-½ 343 (300-½) 520-⅝ 343 (300-⅝)				
CIRCLING 720-1 486 (500-1) 740-1 506 (600-1) 800-1½ 566 (600-1½) 960-2¼ 726 (800-2¼)				