

VOR/DME MFE 117.2 Chan 119	APP CRS 305°	Rwy Ldg 7120 TDZE 102 Apt Elev 107
--	------------------------	---


VOR RWY 32
MC ALLEN INTL (MFE)

T Circling NA northeast of Rwy 14-32. When local altimeter setting not received, use Weslaco altimeter setting and increase all MDA 40 feet and S-32 Cat C/D and Circling Cat C visibility $\frac{1}{8}$ mile, increase DIVAN Fix Minimums S-32 Cat C/D visibility $\frac{1}{8}$ mile. VDP NA when using Weslaco altimeter setting.

MISSED APPROACH: Climb to 900 then climbing right turn to 2100 direct MFE VOR/DME.

ATIS 128.5	VALLEY APP CON 126.55 377.2	MC ALLEN TOWER★ 118.5 (CTAF) 0 256.9	GND CON 121.8	UNICOM 122.95
---------------	--------------------------------	---	------------------	------------------

DME or RADAR REQUIRED

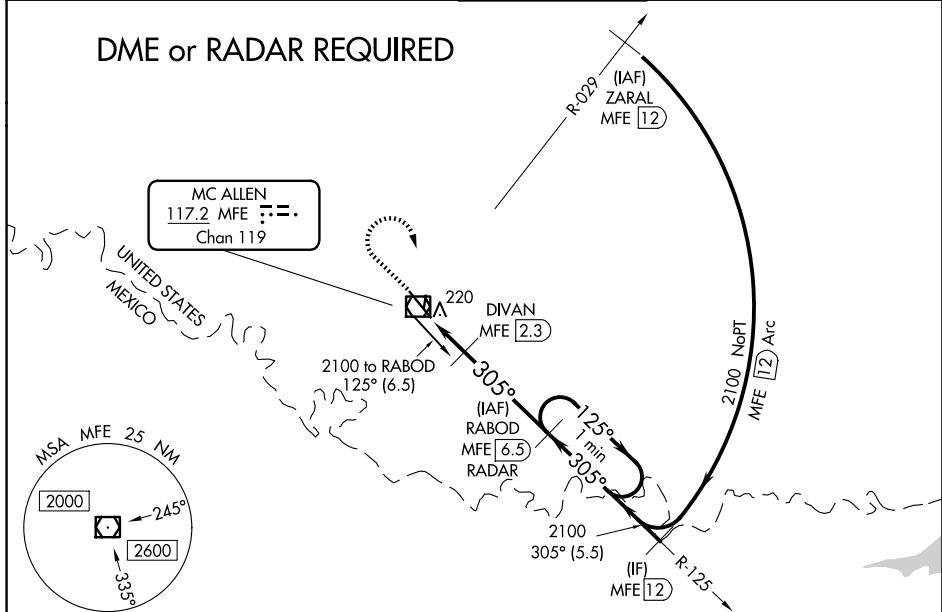

ELEV 107	D	TDZE 102
----------	----------	----------

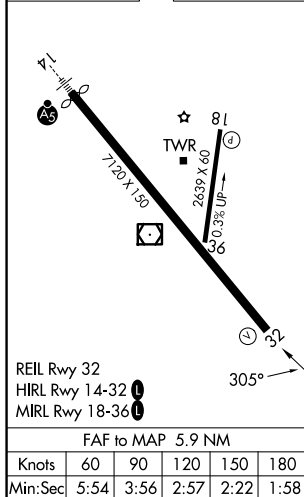


Diagram illustrating the DIVAN FIX MINIMUMS procedure. The diagram shows a flight path starting from a holding pattern (One Minute Holding Pattern) at 2100, proceeding to a 305° turn, then a 125° turn, and finally a 305° turn to 2100. Key distances and altitudes are marked: 1 NM, 0.7 NM, and 4.2 NM. Altitudes are 660, 660-1, 660-1 1/2, 660-1 5/8, 660-1 7/8, 660-2 1/4, and 660-2 3/4. The diagram also shows the MFE VOR/DME and MFE RADAR stations.