

LOC/DME I-PQL	APP CRS	Rwy Idg
110.1	168°	6501
Chan 38		TDZE 17
		Apt Elev 17

ILS or LOC RWY 17

TRENT LOTT INTL (PQL)


⚠

When local altimeter setting not received, use Mobile Rgnl altimeter setting and increase DA to 292 feet; increase all MDA 80 feet and S-LOC 17 visibility Cat B ¼ SM, increase Circling visibility Cats B and C ¼ SM. OTIME Fix Minimums, increase S-LOC 17 visibility Cats C and D ½ SM and Circling Cats C and D ½ SM. For inop ALS when using Mobile Rgnl altimeter setting increase S-ILS all Cats visibility to ¾ SM.

MALSR

MISSED APPROACH: Climb to 900 then climbing left turn to 2000 direct SJI VORTAC and hold.

ATIS	MOBILE APP CON★	TRENT LOTT TOWER★	GND CON	CLNC DEL	UNICOM
135.175	121.0 307.1	118.575 (CTAF) 0	121.725	121.725	122.8

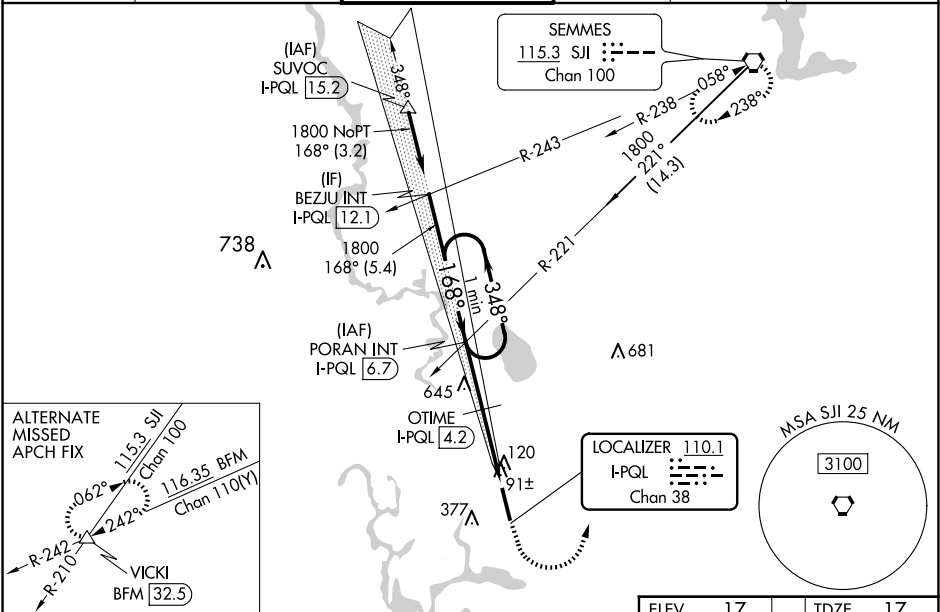

		ELEV 17		TDZE 17	
		900 2000 SJI			
		#980 when using Mobile Rgnl altimeter setting.			
One Minute Holding Pattern		1800 ←348° 168°→ 1800 1800 OTIME I-PQL 4.2 I-PQL 2.2 I-PQL 1.2 #900			
GS 3.00° TCH 50		2.5 NM		2.1 NM	
		0.9 NM			
CATEGORY	A	B	C	D	
S-ILS 17	217-½		200 (200-½)		
S-LOC 17	900-¾	883 (900-¾)	900-2	883 (900-2)	
CIRCLING	900-1¼	883 (900-1¼)	900-2¾	900-3	
			883 (900-2¾)	883 (900-3)	
OTIME FIX MINIMUMS					
S-LOC 17	360-½	343 (400-½)	360-⅝	343 (400-⅝)	
CIRCLING	480-1	680-1	680-1¾	680-2	
	463 (500-1)	663 (700-1)	663 (700-1¾)	663 (700-2)	

