


▼

▲ NA


Baro-VNAV NA. DME/DME RNP-0.3 NA. Use Gadsden altimeter setting, when not received, use Anniston altimeter setting and increase all DA/MDA 20 feet.


MISSED APPROACH: Climb to 1500 then climbing right turn to 3600 direct WEBIL and hold.

GAD AWOS-3PT 127.825	ATLANTA CENTER 124.5 270.325	CTAF 122.90
-------------------------	---------------------------------	----------------

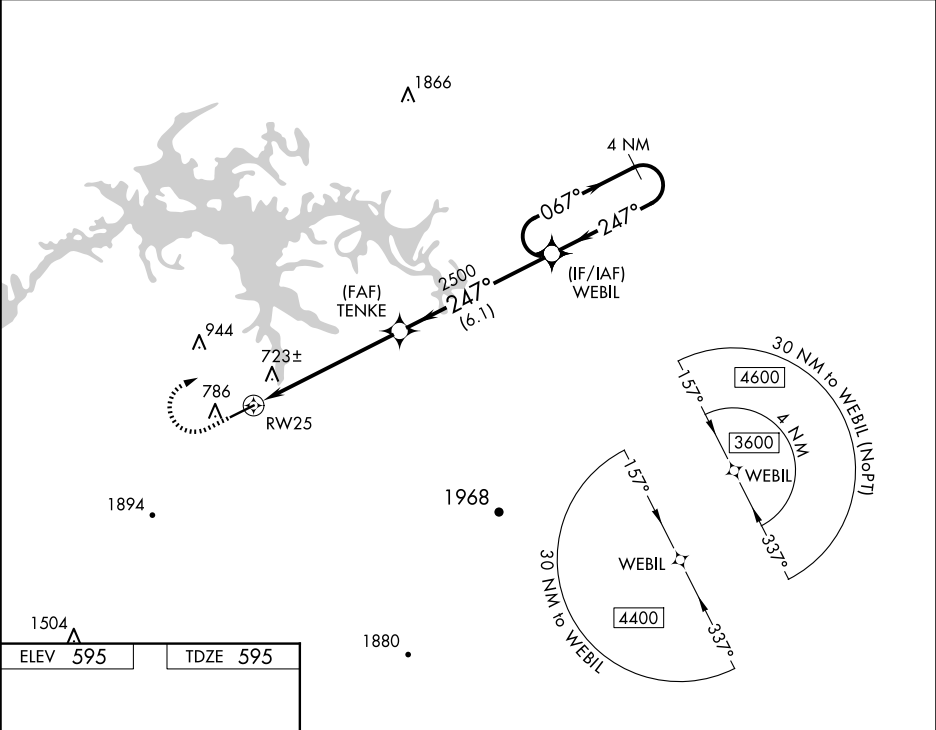

ELEV 595	TDZE 595
----------	----------

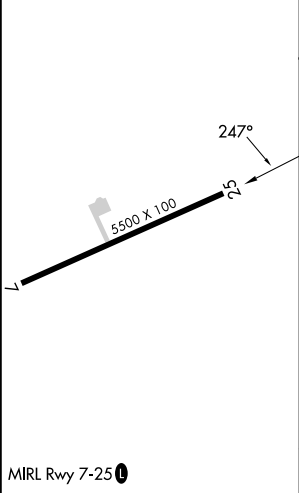

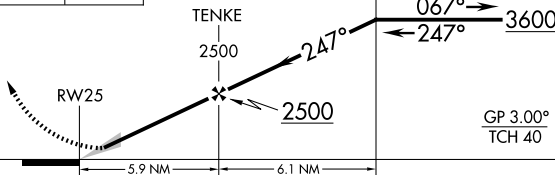1500	3600	WEBIL	4 NM Holding Pattern		
					
					
CATEGORY	A		B	C	D
LPV DA			856-7/8 261 (300-7/8)		
LNAV/VNAV DA			1064-1 5/8 469 (500-1 5/8)		
LNAV MDA	1180-1 585 (600-1)		1180-1 3/4 585 (600-1 3/4)		
CIRCLING	1180-1 585 (600-1)		1360-2 1/4 765 (800-2 1/4)		2260-3 1665 (1700-3)