

LOC/DME I-EWB	APP CRS	Rwy Ldg	5400
109.7	054°	TDZE	70
Chan 34		Apt Elev	79

ILS or LOC RWY 5


NEW BEDFORD RGNL (E-WB)

⚠️ AutoPilot coupled approach NA below 470. DME required. VDP NA with Taunton altimeter setting. When local altimeter setting not received, use Taunton altimeter setting and increase all DA 34 feet and all MDA 40 feet; increase S-LOC 5 Cats C and D and Circling Cat C visibility 1/8 SM; increase WIDON fix minimums Circling Cat C visibility 1/4 SM. For inop MALSRL, increase WIDON fix minimums S-LOC 5 Cat C/D visibility 1/4 mile. #RVR 1800 authorized with use of FD or AP or HUD to DA.

MALSRL

⚠️ MISSED APPROACH: Climb to 800 then climbing left turn to 2100 on heading 210° and on I-EWB localizer SW course R-234 to BONNI INT/I-EWB 11.4 DME and hold.

ATIS	PROVIDENCE APP CON★	NEW BEDFORD TOWER★	GND CON	UNICOM
126.85	128.7 269.525	118.1 (CTAF) 0 239.0	121.9	122.95

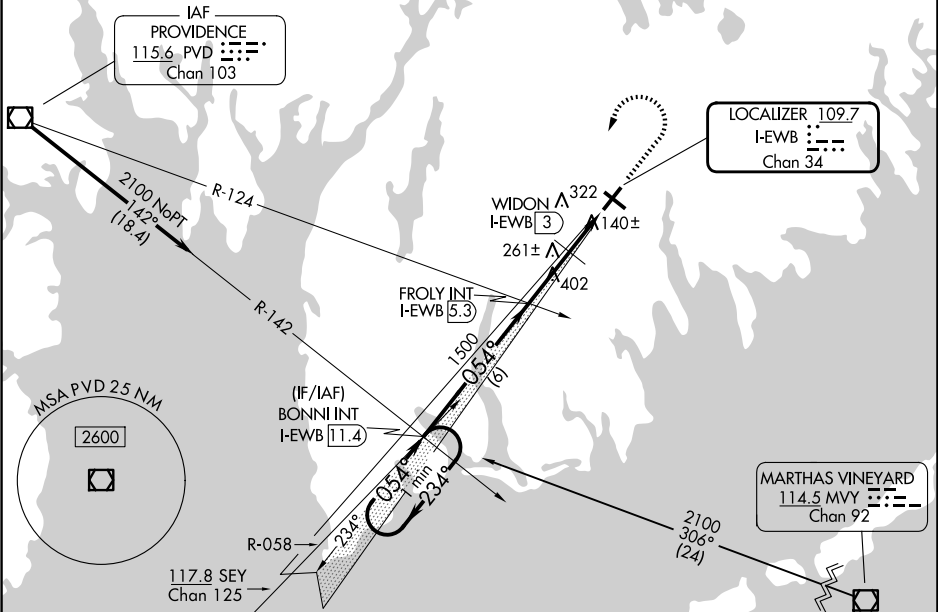

One Minute Holding Pattern	BONNI INT I-EWB 11.4	FROLY INT I-EWB 5.3	WIDON I-EWB 3	*I-EWB 1.9	I-EWB 1	ELEV 79	TDZE 70
	2100	1500	1500	1500	1500		
	234°	054°	054°	054°	054°		
	GS 3.00° TCH 49						
		6 NM	2.3 NM	1.1 NM	1 NM		
CATEGORY	A	B	C	D			
S-ILS 5 #		270/24	200 (200-1/2)				
S-LOC 5		720/24	650 (700-1/2)	720-13/8	650 (700-13/8)		
CIRCLING		720-1	641 (700-1)	720-17/8	960-3		
				641 (700-17/8)	881 (900-3)		
WIDON FIX MINIMUMS							
S-LOC 5		420/24	350 (400-1/2)	420/30	350 (400-5/8)		
CIRCLING		600-1	640-1	720-13/4	960-3		
		521 (600-1)	561 (600-1)	641 (700-13/4)	881 (900-3)		
FAF to MAP 4.4 NM							
Knots 60 90 120 150 180							
Min:Sec 4:24 2:56 2:12 1:46 1:28							