


HI-ILS or LOC/DME RWY 30

LOC I-VBG 110.1	APCH CRS 305°	Rwy Idg 15,000 TDZE 368 Arpt Elev 368	[USSF]	VANDENBERG SFB (KVBG)
DME required				ALSF-2
* When ALS inop, increase CAT CDE RVR to 40 and vis to ¾ mile. ** When ALS inop, increase CAT CDE vis to 1½ miles.				MISSED APPROACH: Climb out VBG TACAN R-309 to WARRN and hold. Continue climb in hold maintain 4000.

ATIS 133.125 257.975	SANTA BARBARA APP/DEP CON ★ 124.15 327.8	TOWER ★ 124.95 (CTAF) 326.2	GND CON 121.75 275.8
--------------------------------	---	--	--------------------------------

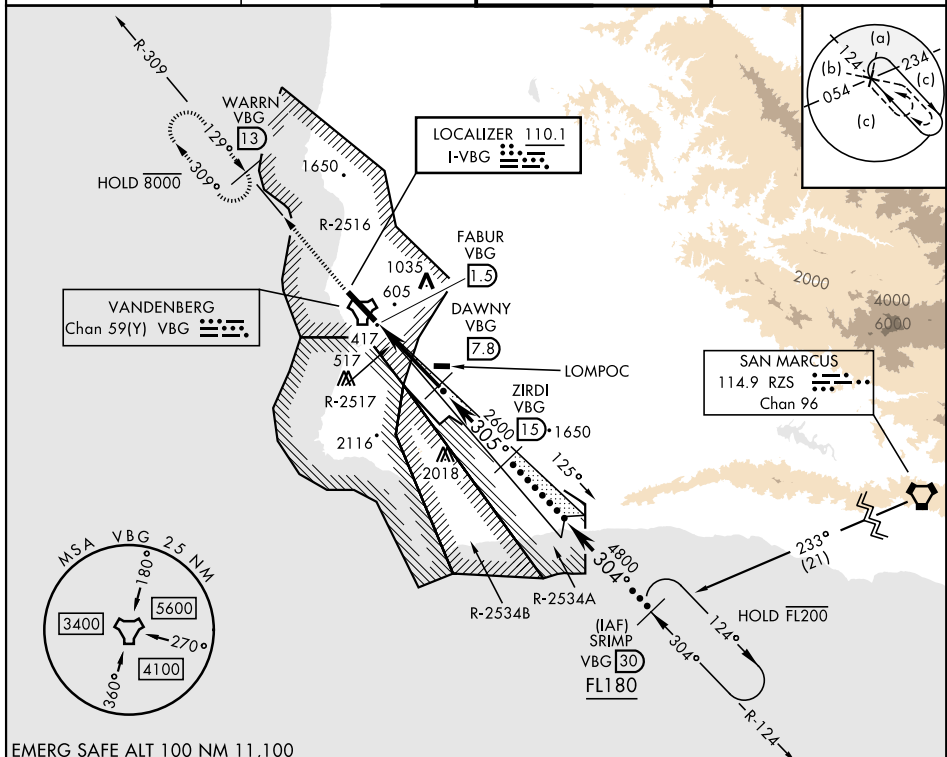

EMERG SAFE ALT 100 NM 11,100

4000
↑
VBG
R-309

WARRN
VBG
(13)

VGSI and ILS Glideslope
not coincident.

SRIMP
VBG (30)

ZIRDI
VBG (15)

DAWNY
VBG (7.8)

FABUR
VBG (1.5)

2600

4800

FL180

GS 3.00°
TCH 72

0.5 NM

6.3 NM

CATEGORY

C

D

E

S-ILS 30 *

568/24

200

(200-½)

S-LOC 30 **

900/55

532

(600-1)

CIRCLING

1020-1¾
652 (700-1¾)

1180-2¾
812 (900-2¾)

1560-3
1192 (1200-3)

ELEV 368

TDZE 368

325

15,000 x 300

0.2% DOWN

382

305°

440

TWR

HIRL Rwy 12-30

HI-ILS or LOC/DME RWY 30