


PAL-WAUKEE SEVEN DEPARTURE

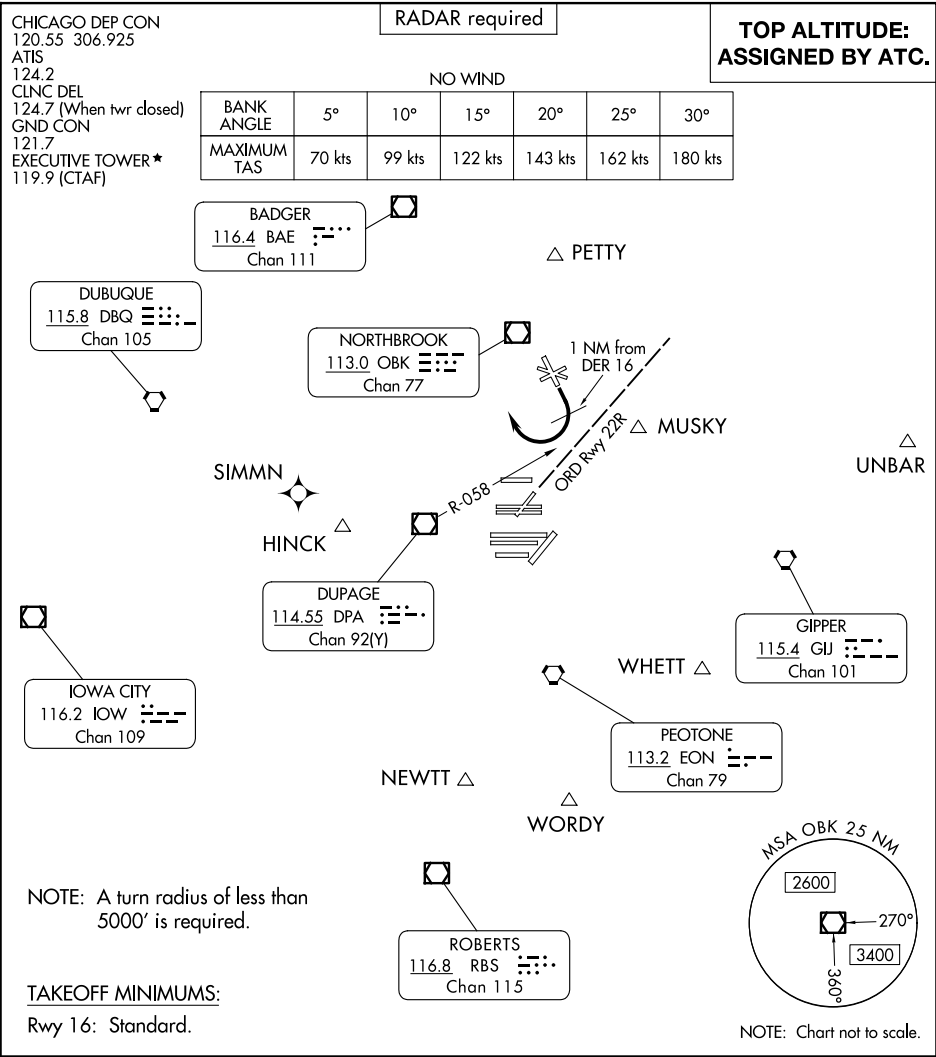

DEPARTURE ROUTE DESCRIPTION

TAKEOFF RUNWAY 16: Start right turn within 1 NM of departure end of runway and complete turn to assigned heading north of R-058 of the Dupage (DPA) VOR/DME. If unable to comply, advise Executive Tower prior to take-off, thence

. . . . all aircraft RADAR vectors to navaid/fix. Maintain ATC assigned altitude, expect requested altitude (three minutes for jet/turbo engines or five minutes for piston engines) after departure.