


WAAS CH 99720 W13A	APP CRS 131°	Rwy Idg TDZE 1289 Apt Elev 1289
--	------------------------	---

RNAV (GPS) RWY 13

PAULDING NORTHWEST ATLANTA (PUJ)

RNP APCH.		MISSED APPROACH: Climb to 1800 then climbing left turn to 3000 direct YOBUY and hold.
T NA	For uncompensated Baro-VNAV systems, LNAV/VNAV NA below -17°C or above 54°C.	

AWOS-3 126.225	ATLANTA APP CON 121.0 268.7	UNICOM 123.075 (CTAF) 0
--------------------------	---------------------------------------	-----------------------------------

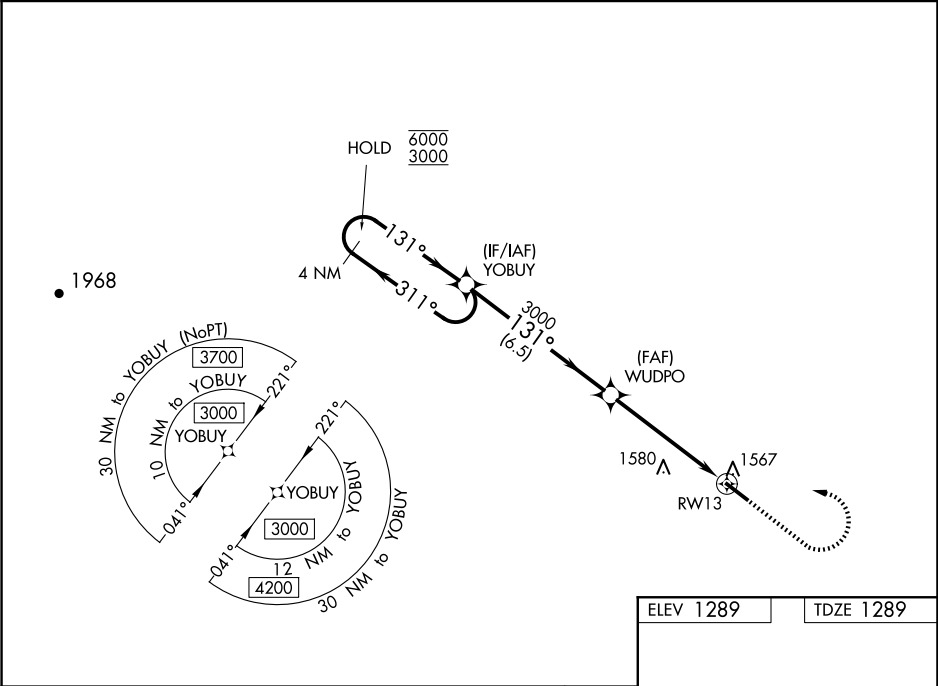

4 NM Holding Pattern YOBUY		WUDPO 3000	1800	3000	YOBUY
6000 ← 311°		131° →	1800	3000	YOBUY
GP 3.00°		3000	*LNAV only.		
TCH 50		3000	1.5 NM to RWY 13		
6.5 NM		3.7 NM	1.5 NM		
CATEGORY	A	B	C	D	
LPV DA		1507-3/4	218 (300-3/4)		
LNAV/DA VNAV		1763-1 3/8	474 (500-1 3/8)		
LNAV MDA	1820-1	531 (600-1)	1820-1 1/2	531 (600-1 1/2)	
CIRCLING	1880-1	591 (600-1)	1940-1 3/4	651 (700-1 3/4)	1940-2 651 (700-2)

ELEV 1289

TDZE 1289

131° to RWY 13

5505 X 100

31

HIRL Rwy 13-31 0

REIL Rws 13 and 31 0