
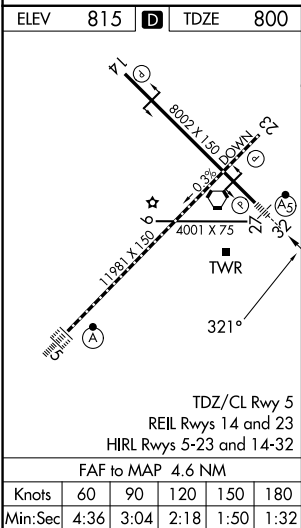


LOC/DME I-FWA 109.9 Chan 36	APP CRS 321°	Rwy Ldg TDZE Apt Elev	8001 800 815
---	------------------------	-----------------------------	---

ILS or LOC RWY 32
FORT WAYNE INTL (FWA)

DME required for LOC only. DME or RADAR required for procedure entry.		MALSR	MISSED APPROACH: Climb to 3000 then left turn on FWA VORTAC R-285 to TELEY INT/FWA 17.5 DME and hold.
⚠ For inop ALS, increase S-ILS 32 visibility Cat E to RVR 4000 and increase S-LOC 32 visibility Cats C, D, and E to RVR 5500.	⚠ ASR * RVR 1800 authorized with use of FD or AP or HUD to DA.		

ATIS 121.25 360.825	FORT WAYNE APP CON 127.2 284.6	FORT WAYNE TOWER 119.1 269.325	GND CON 121.9 348.6	CLNC DEL 124.75
-------------------------------	--	--	-------------------------------	---------------------------

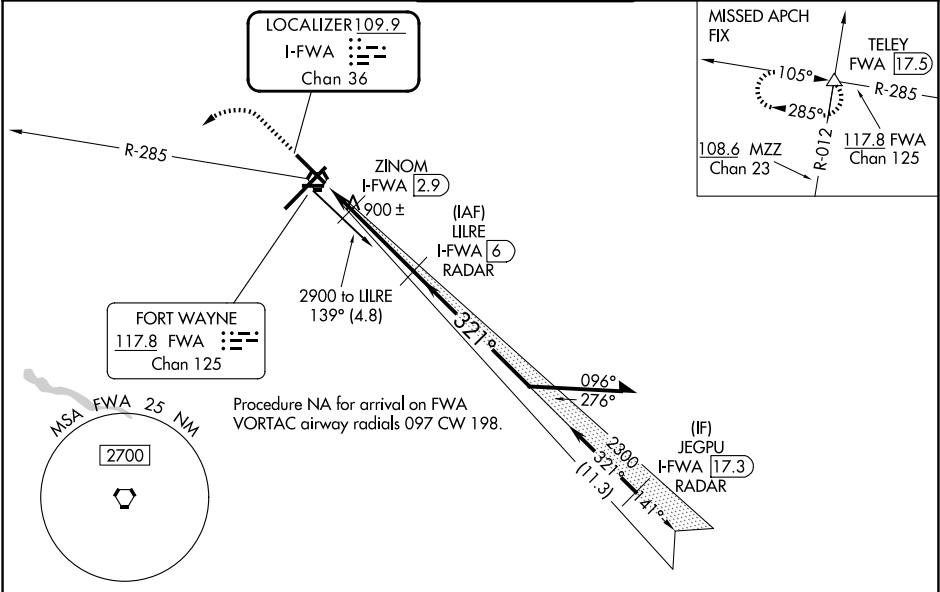

Cat E Procedure Turn NA.					
3000 FWA R-285 TELEY Use I-FWA DME when on the localizer course. ZINOM I-FWA 2.9 I-FWA 1.5 LILRE I-FWA 6 RADAR 2300 1280 2300 1.4 NM 3.2 NM 141° 321° 2500 GS 3.00° TCH 56					
CATEGORY	A	B	C	D	E
S-ILS 32*	1000/24 200 (200-½)				
S-LOC 32	1160/24	360 (400-½)	1160/30	360 (400-¾)	
CIRCLING	1300-1	485 (500-1)	1420-1¾ 605 (700-1¾)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)