


WAAS CH 66041 W06A	APP CRS 057°	Rwy Ldg 10000 TDZE 1103 Apt Elev 1159
--	------------------------	--

RNAV (GPS) Z RWY 6
SAN BERNARDINO INTL (SBD)

RNP APCH	MISSED APPROACH: Climb to 2000 then climbing right turn to 6000 direct PDZ VORTAC and hold, continue climb-in-hold to 6000. # Missed approach requires minimum climb of 340 feet per NM to 4000; if unable to meet climb gradient, see RNAV (GPS) Y RWY 6.			
▼ ⚠	Circling NA northwest of Rwy 6-24. When local altimeter setting not received, use Ontario altimeter setting and increase DA to 1426 feet and all visibilities ¼ SM; increase all MDA 80 feet and LNAV Cats C/D and Circling Cat C visibility ¼ SM.			

D-ATIS 124.175	SOCAL APP CON 127.0 318.2	SAN BERNARDINO TOWER ★ 119.45 (CTAF) 0	GND CON 121.8	UNICOM 122.975
--------------------------	-------------------------------------	--	-------------------------	--------------------------

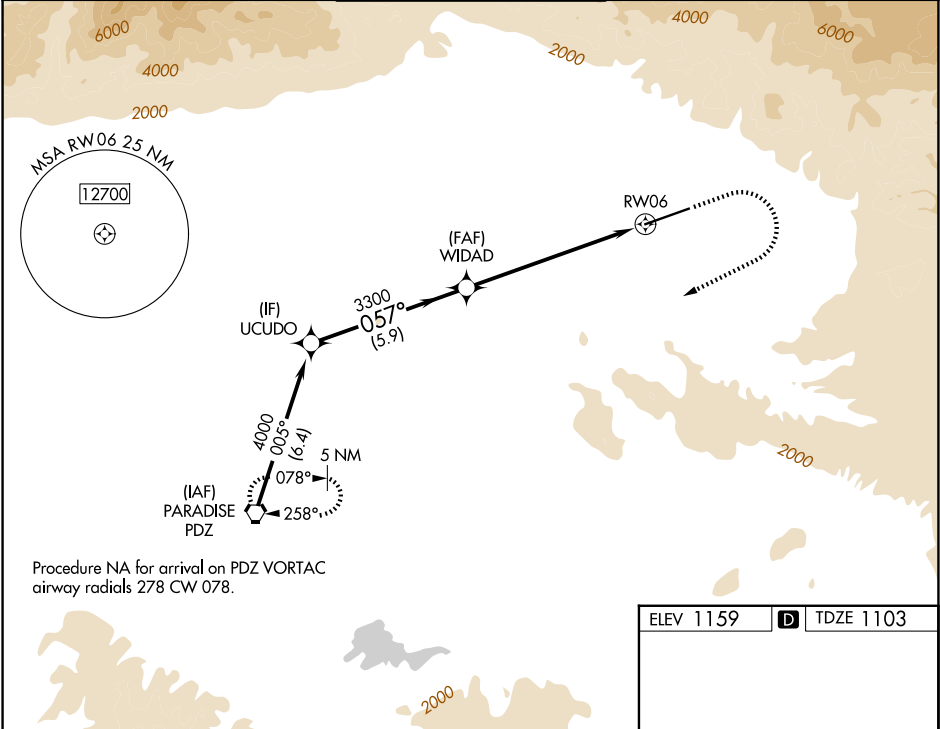

Procedure NA for arrival on PDZ VORTAC
airway radials 278 CW 078.

ELEV 1159	D	TDZE 1103
-----------	---	-----------

UCUDO		WIDAD		2000	6000	PDZ
4000		3300		↑	↷	⬡
GP 3.00° TCH 51		*1.9 NM to RWY06		*LNAV only		
3300		RWY06				
5.9 NM		4.9 NM		1.9 NM		
CATEGORY	A	B	C	D		
LPV DA#	1353-¾		250 (200-¾)			
LNAV MDA#	1740-1	637 (600-1)	1740-1¾	637 (600-1¾)		
CIRCLING	1740-1	581 (600-1)	1760-1¾ 601 (700-1¾)	2640-3 1481 (1500-3)		

