



LOC/DME I-ADJ	APP CRS	Rwy Ldg	7000
109.35	120°	TDZE	1225
Chan 30(Y)		Apt Elev	1249

ILS Y RWY 12

PANGBORN MEML (EAT)

DME required.	MALSR MISSED APPROACH: Climb to 2700 then climb to 4000 direct EAT VOR/DME and on EAT VOR/DME R-117 to QUINT INT/EAT 16.6 DME and hold.
--	---

ASOS 119.925	SEATTLE CENTER 126.1	UNICOM 123.0 (CTAF) 0
------------------------	--------------------------------	---------------------------------

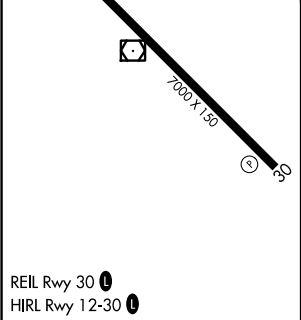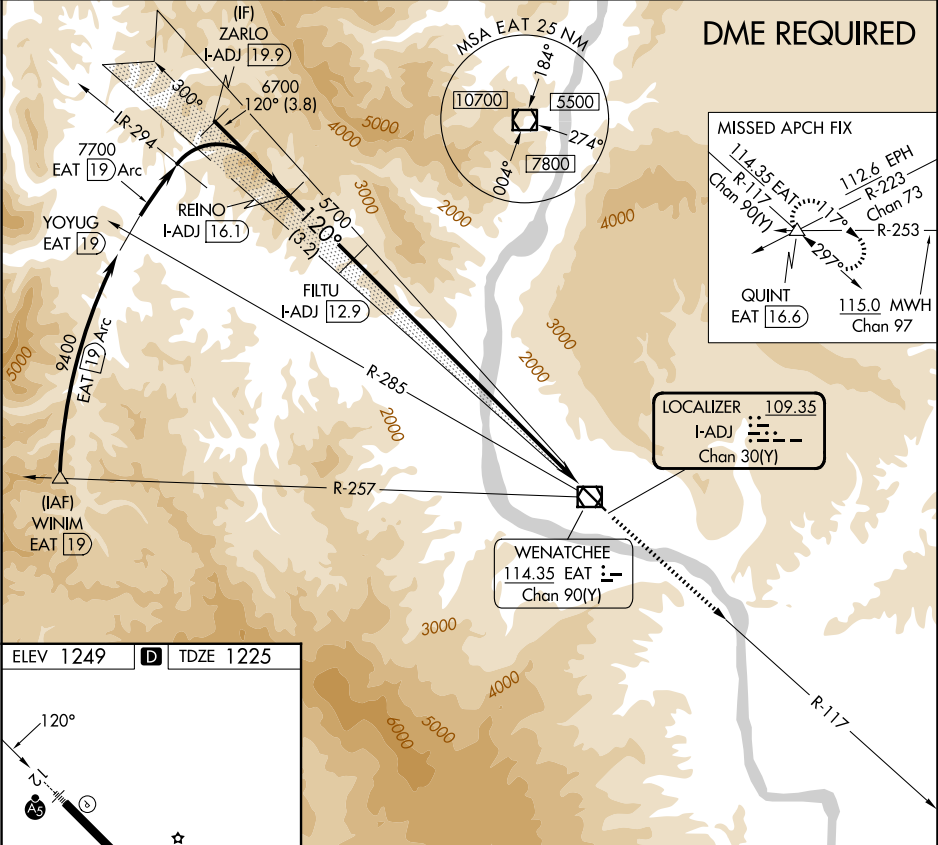

ZARLO I-ADJ 19.9 REINO I-ADJ 16.1 FILTU I-ADJ 12.9			2700 ↑	4000 ↑	EAT 	EAT R-117	QUINT 
7700 6700 5700 GS 3.60° TCH 58			Use I-ADJ DME when on the localizer course.				
3.8 NM 3.2 NM 11.6 NM							
CATEGORY	A	B	C	D			
S-ILS 12	2433-4 1208 (1200-4)			NA			