
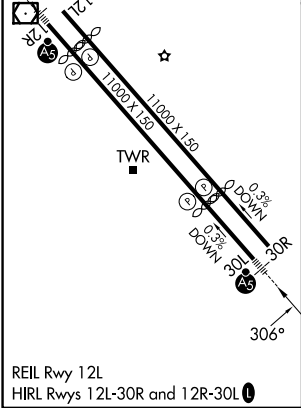


LOC/DME I-SJC	30L 30R
110.9	7614 7597
Chan 46	TDZE 57 55
	Apt Elev 62 62

ILS or LOC RWY 30L
NORMAN Y MINETA SAN JOSE INTL (SJC)

RNAV 1-GPS or RADAR required for procedure entry. DME required. From BORED: RNAV 1-GPS required.	MALSR Rwy 30L	MISSED APPROACH: Climb to 1900 on SJC VOR/DME R-303 to ARTAQ INT/SJC 7 DME and hold.
# RVR 1800 authorized with use of FD or AP or HUD to DA.		

D-ATIS 126.95	NORCAL APP CON 120.1 290.25	SAN JOSE TOWER ★ 124.0 (CTAF) 257.6	GND CON 121.7	UNICOM 122.95
-------------------------	---------------------------------------	---	-------------------------	-------------------------

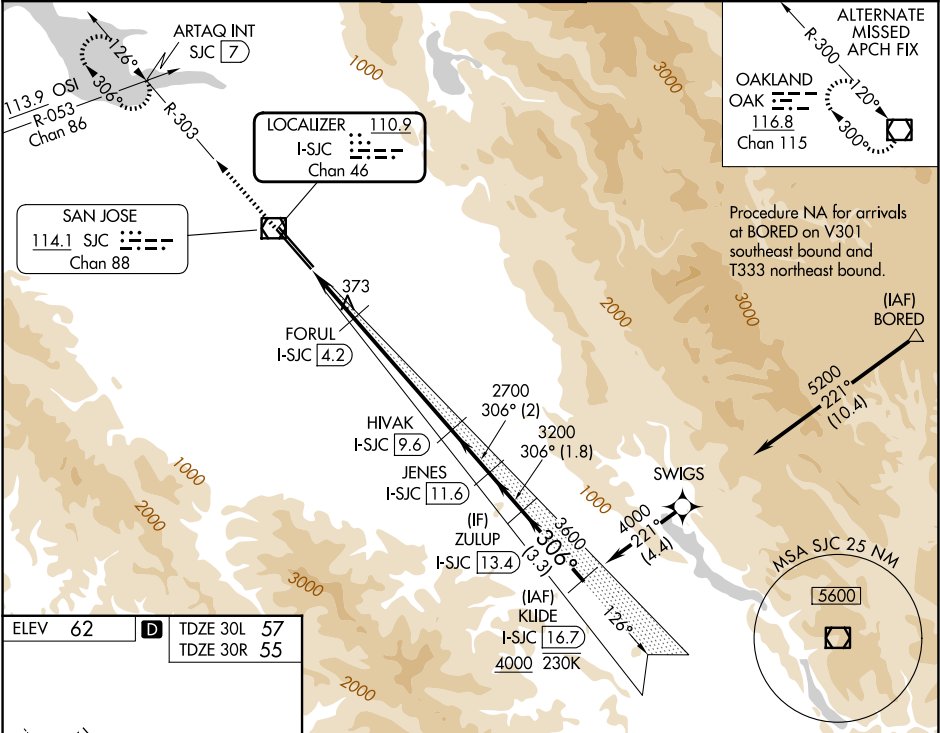

1900	ARTAQ INT	VGSI and ILS glidepath not coincident (VGSI Angle 3.00/TCH 70).	JENES I-SJC 11.6	ZULUP I-SJC 13.4	KLUDE I-SJC 16.7
SJC R-303	FORUL I-SJC 4.2		HIAK I-SJC 9.6		
*LOC only	*I-SJC 3				
I-SJC 1.4					
1.6 NM	1.2 NM	5.3 NM	2 NM	1.8 NM	3.3 NM
CATEGORY	A	B	C	D	
S-ILS 30L#	257/24 200 (200-½)				
S-LOC 30L	640/24	583 (600-½)	640-1¼	583 (600-1¼)	
SIDESTEP 30R	640-1	585 (600-1)	640-1¾	585 (600-1¾)	640-2 585 (600-2)