

TOP ALTITUDE:
5000

D-ATIS 125.8

CLNC DEL

126.4 284.6

CPDLC

SAN JUAN TOWER

132.05 257.8


GND CON

121.9 348.6

SAN JUAN DEP CON

119.4 269.2 (West & SW)

120.9 290.2 (North & East)

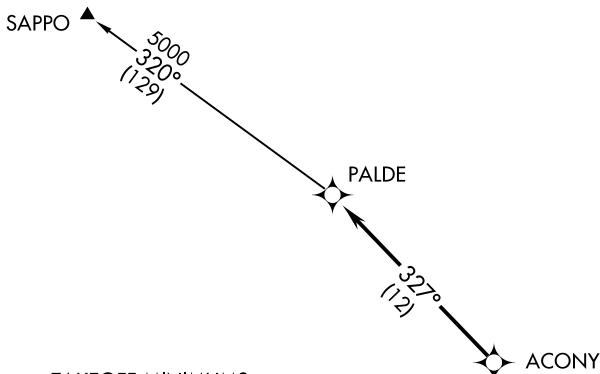


NOTE: GPS required.

NOTE: For jet aircraft only.

NOTE: RNAV 1.

NOTE: RADAR required.

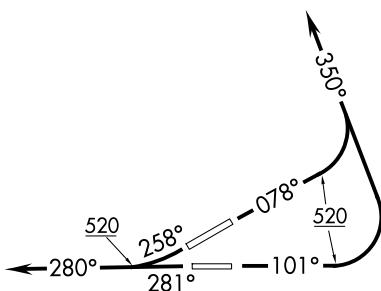

NOTE: Chart not to scale.



DEPARTURE ROUTE DESCRIPTION

T TAKEOFF RWY 8: Climb heading 078° to 520, then climbing left turn heading 350° or as assigned by ATC for vectors to ACONY, then on track 327° to PALDE, thence. . . .

TAKEOFF RWY 10: Climb heading 101° to 520, then climbing left turn heading 350° or as assigned by ATC for vectors to ACONY, then on track 327° to PALDE, thence. . . .

TAKEOFF RWY 26: Climb heading 258° to 520, then climb on heading 280° or as assigned by ATC for vectors to ACONY, then on track 327° to PALDE, thence. . . .

TAKEOFF RWY 28: Climb heading 281° to 520, then climb on heading 280° or as assigned by ATC for vectors to ACONY, then on track 327° to PALDE, thence. . . .

. . . . on SAPPO transition, maintain 5000 unless assigned lower altitude. Expect clearance to FL280, or requested altitude if lower, ten minutes after departure.

SAPPO TRANSITION (ACONY3.SAPPO)