


LOC/DME	I-RUT	APP CRS	Rwy Ldg	5004
111.7		194°	TDZE	787
Chan 54			Apt Elev	787

ILS Y or LOC Y RWY 19

RUTLAND/SOUTHERN VERMONT RGNL (RUT)

DME required.	MALSR	MISSED APPROACH: Climb to 2840 then climbing right turn to 5700 on heading 360° and CAM VOR/DME R-033 to KOPVE/I-RUT 16.3 DME and hold.
⚠ ⚠ ❄ Circling to Rwy 13, 31 NA at night. Circling NA northeast of Rws 19 and 31. Inop table does not apply to S-ILS 19 all Cats, S-LOC 19 Cats C/D.	⚠ ⚠ ❄ -7°C	

AWOS-3PT	BOSTON CENTER	UNICOM
118.375	135.7 282.2	122.8 (CTAF) 0

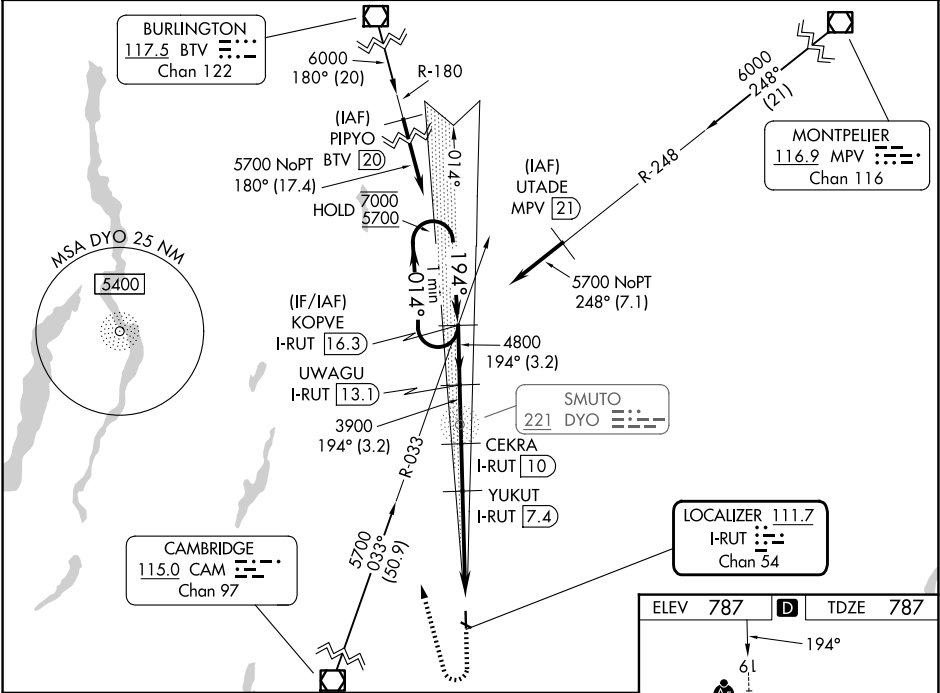

One Minute Holding Pattern	KOPVE I-RUT 16.3		2840 5700		CAM R-033		KOPVE I-RUT 16.3	
	UWAGU I-RUT 13.1		CEKRA I-RUT 10		YUKUT I-RUT 7.4		*LOC only	
GS 3.20° TCH 54	7000 014°		5700 194°		4800		3900	
	3.2 NM		3.2 NM		2.5 NM		3.5 NM	
CATEGORY	A		B		C		D	
S-ILS 19	2162-5		1375 (1400-5)					
S-LOC 19	2160-¾ 1373 (1400-¾)		2160-1 1373 (1400-1)		2160-3 1373 (1400-3)			
CIRCLING	2160-1¼ 1373 (1400-1¼)		2160-1½ 1373 (1400-1½)		2520-3 1733 (1800-3)		2760-3 1973 (2000-3)	

