

LOC/DME I-PQL	APP CRS	Rwy Idg
110.1	168°	6501
Chan 38		TDZE 17
		Apt Elev 17

ILS or LOC RWY 17

TRENT LOTT INTL (PQL)

⚠


When local altimeter setting not received, use Mobile Rgnl altimeter setting and increase DA to 292 feet; increase all MDA 80 feet and S-LOC 17 visibility Cat B ¼ SM, increase Circling visibility Cats B and C ¼ SM. OTIME Fix Minimums, increase S-LOC 17 visibility Cats C and D ½ SM and Circling Cats C and D ½ SM. For inop ALS when using Mobile Rgnl altimeter setting increase S-ILS all Cats visibility to ¾ SM.

MALSR



MISSED APPROACH: Climb to 900 then climbing left turn to 2000 direct SJI VORTAC and hold.

ATIS	MOBILE APP CON★	TRENT LOTT TOWER★	GND CON	CLNC DEL	UNICOM
135.175	121.0 307.1	118.575 (CTAF) 0	121.725	121.725	122.8

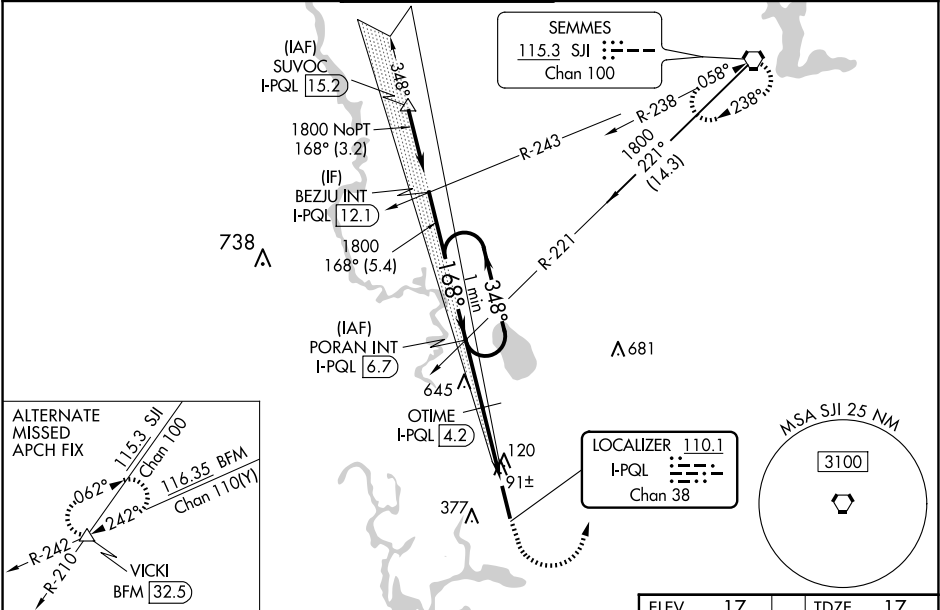

One Minute Holding Pattern

GS 3.00° TCH 50

1800 ← 348° 168° → 1800

1800

OTIME I-PQL 4.2

I-PQL 2.2

I-PQL 1.2

#900

2.5 NM

2.1 NM

0.9 NM

2000

900

SJI

#980 when using Mobile Rgnl altimeter setting.

CATEGORY	A	B	C	D
S-ILS 17	217-½ 200 (200-½)			
S-LOC 17	900-¾ 883 (900-¾)	900-2 883 (900-2)		
CIRCLING	900-1¼ 883 (900-1¼)	900-2¾ 883 (900-2¾)		
OTIME FIX MINIMUMS				
S-LOC 17	360-½ 343 (400-½)	360-⅝ 343 (400-⅝)		
CIRCLING	480-1 463 (500-1)	680-1 663 (700-1)	680-1¾ 663 (700-1¾)	680-2 663 (700-2)

