


VOR/DME SCC	APP CRS	Rwy Ldg	6500
113.9	238°	TDZE	66
Chan 86		Apt Elev	67

VOR Z RWY 24

DEADHORSE (SCC) (PASC)

DME required.	MALSR	MISSED APPROACH: Climb to 1400 then climbing right turn to 2000 direct SCC VOR/DME and hold, continue climb-in-hold to 2000.
For inop ALS, increase Cats C/D/E visibility to RVR 6000.		

AFIS 118.4	ANCHORAGE CENTER 134.4 370.9	DEADHORSE RADIO 123.6 (CTAF) 1
---------------	---------------------------------	-----------------------------------

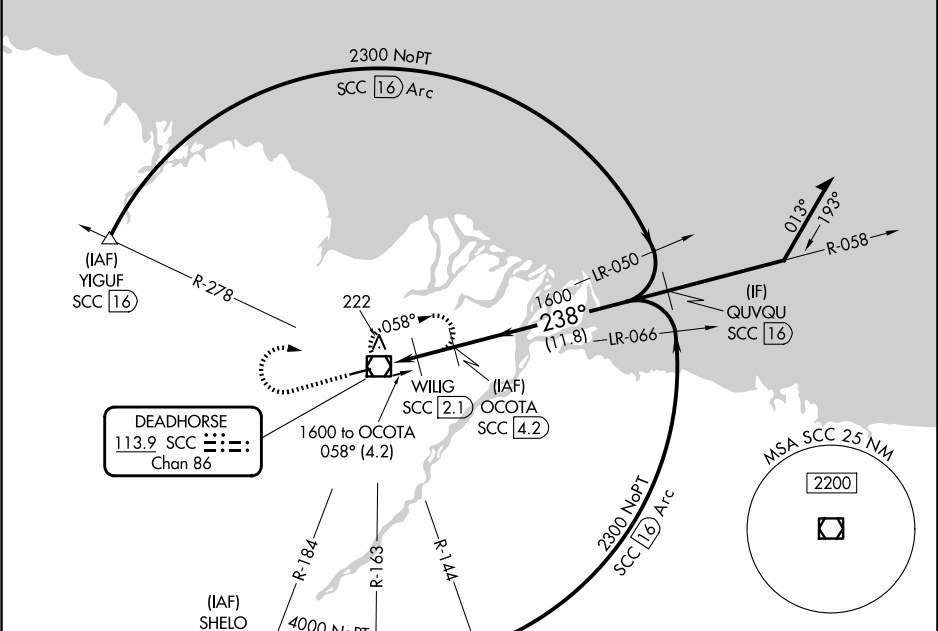

ELEV 67	TDZE 66
---------	---------

