
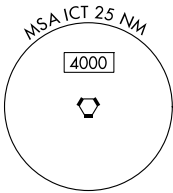


VORTAC ICT 113.8 Chan 85	APP CRS 273°	Rwy Idg TDZE Apt Elev 1326	N/A N/A
--	------------------------	--	------------

VOR-A
AUGUSTA MUNI (3AU)

DME required.		MISSED APPROACH: Climb to 1900 then climbing left turn to 3000 on heading 050° and on ICT VORTAC R-093 to WANDY/28 DME and hold, continue climb-in-hold to 3000.	
	When local altimeter setting not received, use AAO altimeter setting and increase all MDAs 40 feet.		
AWOS-3P 124.175	WICHITA APP CON 134.8 269.1	CLNC DEL 125.0	UNICOM 122.8 (CTAF)

Procedure NA for arrival on ICT VORTAC
airway radials 033 CW 153.

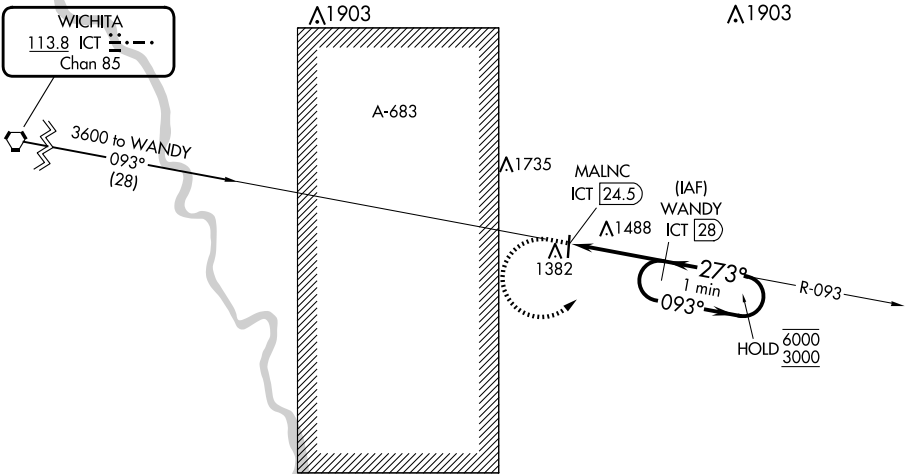

1900 ↑	3000 hdg 050°	ICT R-093	WANDY ICT 28	WANDY ICT 28	One Minute Holding Pattern
CATEGORY	A	B	C	D	
CIRCLING	1800-1 474 (500-1)	1820-1 494 (500-1)	1820-1½ 494 (500-1½)	NA	

